

Contents

Warranty and Customer Support	1
Chapter 1 Introduction	3
About This Manual	4
MP-2 Features	5
Chapter 2 Quick Start	7
Chapter 3 Getting Started	9
Unpacking and Installation	9
Controls and Connectors	10
Connecting the MP-2	15
Audio	16
MIDI	17
Chapter 4 Tutorial	19
Basics of the MP-2	19
Programs	19
MP-2 Modes	20
MP-2 Display	21
Powering Up	22
Play Mode	23
Recalling Programs	23
Program Edit mode	25
Editing Basics	25
Selecting and Editing Parameters	27
Comparing Edited Programs to Stored Versions	29
Naming User Programs	29
Storing Programs	30
Setting Input and Output Levels	32
Using the Stereo Effects Loop	33
System Edit Mode	34
Copying Programs	34
MIDI Parameters	36
Real-Time MIDI (RTM)	39
Making RTM Assignments in Quick Mode	40
The Next Step	41

Chapter 5 Reference	43
Play Mode	43
Using Real-Time MIDI in Play Mode	44
Program Edit Mode.....	44
Storing, Abandoning, and Resuming Edits	45
Tube Voicing	47
Drive & Master Level	47
Compressor	48
Tone Controls	48
Graphic EQ	49
Wah Filter	49
Tremolo	50
Noise Reduction	51
Stereo Chorus.....	52
Stereo Effects Loop.....	52
Program Title.....	53
Real-Time MIDI (RTM).....	53
Compare	61
System Edit Mode.....	61
MIDI Function Menu.....	61
Copy Presets to User	68
Copy Single Programs	68
Swap Programs	69
Panel Mode	69
Restore System Defaults.....	70
Memory Protect.....	71
Appendix A Specifications	72
MP-2 MIDI Implementation Chart	74
Appendix B MIDI and the MP-2	75
Appendix C Troubleshooting	77
Troubleshooting Tips.....	77
Audio Problems	78
MIDI Problems	79
MP-2 Program Chart	80

WARRANTY

The ADA MP-2 (excluding tubes) is warranted against defects in material and workmanship for a period of three-hundred and sixty-five (365) days from date of purchase. Original factory-installed tubes are warranted against defects in material and workmanship for a period of ninety (90) days from date of purchase. During the warranty period, ADA or its agent will, at its sole option, repair or replace defective parts and make necessary repairs to the product which is defective at no charge. If the failure is the result of misuse, abuse, accident or misapplication, ADA has no obligation to repair or replace the failed product. ADA retains the right to make such determination on the basis of factory inspection. ADA will not be responsible for any device damaged by the MP-2. This warranty remains valid only if repairs are performed by ADA or its agent, and provided that the serial number on the unit has not been defaced or removed. This warranty is expressly in lieu of all other warranties either expressed or implied. This warranty gives you specific rights. You may have other rights that vary from state to state.



OPTIONAL EXTENDED WARRANTY

An optional three-year warranty is available on the MP-2 if the extended warranty protection policy is purchased within the first 90 days of purchase. The policy covenants and restrictions are the same as our standard one year warranty, only the term is increased an additional three years after the original factory warranty expires. For the extended warranty application call ADA Customer Service at the number shown below.

RETURNING UNITS FOR SERVICE

If your MP-2 requires service, please call our Customer Service department at the number shown below for a Return Authorization (RA) number and shipping instructions. **Do not ship repairs to ADA without an RA number.**

ADA CUSTOMER SERVICE: (510) 532-1152

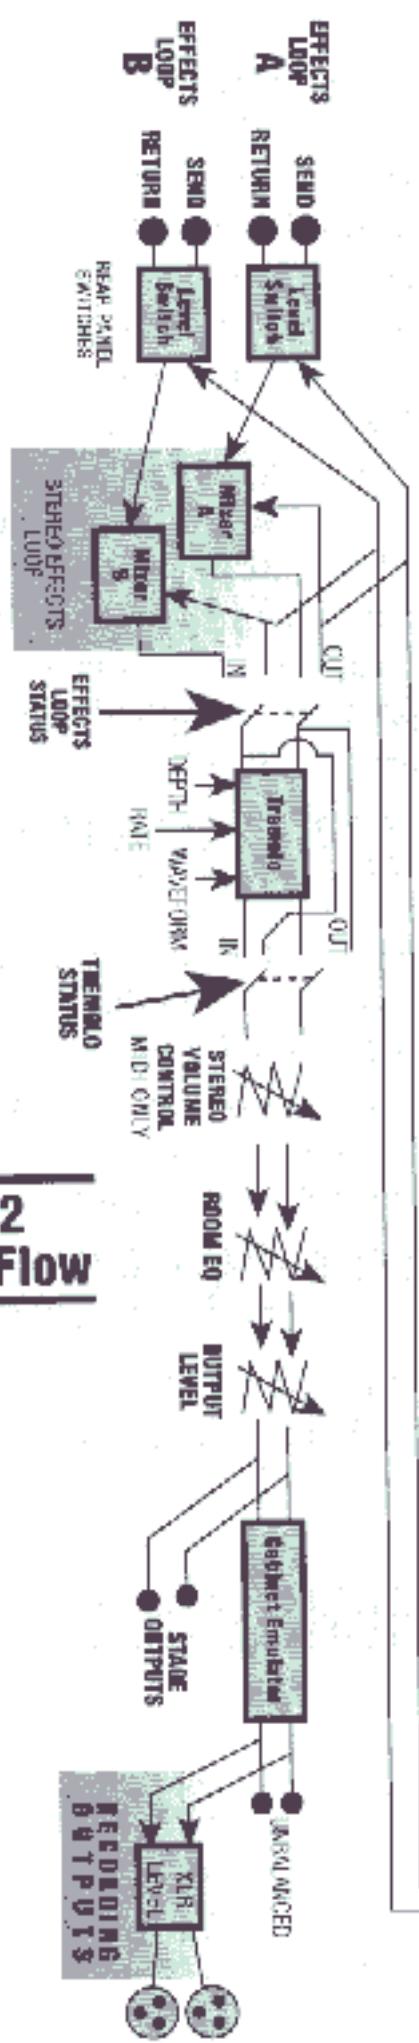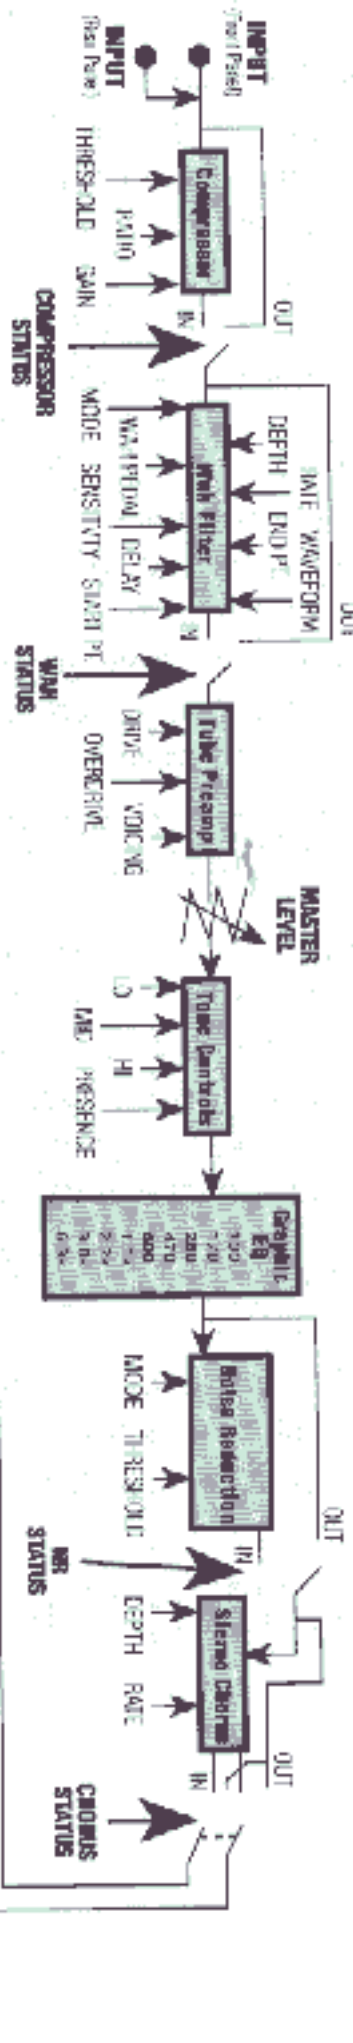

MP-2 Signal Flow

Introduction

This chapter describes this manual and lists the MP-2's features.

Thank you for purchasing the ADA MP-2 MIDI Programmable Tube Preamp. The MP-2 is the latest generation of ADA's programmable tube preamp technology, and contains more gain, processing options, MIDI functions, and professional features than any previous product.

IMPORTANT: Please take the time to fill out and return the enclosed warranty card so that we may provide you with information on future software updates.

This manual provides complete information on the MP-2's features and the procedures for using them. Despite its easy, intuitive operation, making full use of a sophisticated programmable device like the MP-2 requires spending some time studying the manual. If the manual appears somewhat daunting, it is only because of the sheer volume of the MP-2's features, but you will find the time studying the manual well spent as you discover the extent of the MP-2's considerable facilities. Further, the factory default values and Programs can always be reloaded if you "screw up" too badly, so you should have no fear of experimenting when first learning the MP-2.

About This Manual

The body of the manual is divided into five chapters:

Introduction: is this chapter that describes the manual and lists the MP-2's features.

Quick Start: gives a brief procedure for immediate use of the MP-2. If you need to jump right into using the MP-2 without first reading the entire manual, turn to the **Quick Start** chapter which immediately follows this introduction.

Getting Started: explains all of the MP-2's controls and connections.

Tutorial: gives a guided tour of the MP-2's basic functions in a series of lessons. Read this chapter to familiarize yourself with operating the MP-2. The first time a new term is introduced in the Tutorial it appears in bold and underline: new term.

Reference: contains detailed explanations of every MP-2 function. Use this chapter when you are trying to get information on a specific feature.


There are also a number of **Appendixes**, found at the end of the manual, which give helpful information and further explanations on a number of topics relating to using the MP-2.

***NOTE:** Information crucial to understanding the MP-2 is always encased in a box such as this one. Always read this information.*

MP-2 Features

- Complete digital control of an all-analog signal path.
- 128 User programs plus 39 factory Preset programs.
- Two low-noise 12AX7A tubes with 10 tube voicing settings and overdrive.
- Onboard compressor for maximum sustain and funk squeeze.
- Four-band tone controls for basic tone shaping.
- Nine-band graphic equalizer for detailed tone adjustments.
- Powerful effects, including wah-wah, tremolo, and stereo chorus.
- Noise reduction circuitry to reduce unwanted hum and noise at high gain settings.
- Stereo effects loop with programmable mix control. Side-chain design keeps dry signal within MP-2, preserving dynamics and signal-to-noise ratio.
- Speaker emulation circuit and room compensation equalization.
- Cabinet-emulated, balanced XLR outputs with ground lift, as well as unbalanced 1/4" phone outputs for recording.
- Independent unbalanced 1/4" phone outputs for stage use.
- Front and rear panel 1/4" phone inputs for easy access.
- Complete MIDI implementation, including Real-Time MIDI for changing parameters "on the fly."
- Optional MIDI Controller Pedal Pack provides instant access to any program for fast on-stage control, plus real-time MIDI continuous control.

- 7) Raise the amplifier volume to a moderate level, then slowly raise the Output Level control and play. Adjust the Output Level control to a comfortable listening level.
- 8) Use the Up and Down arrow keys to recall programs. The first 39 User programs are the same as the factory Preset programs

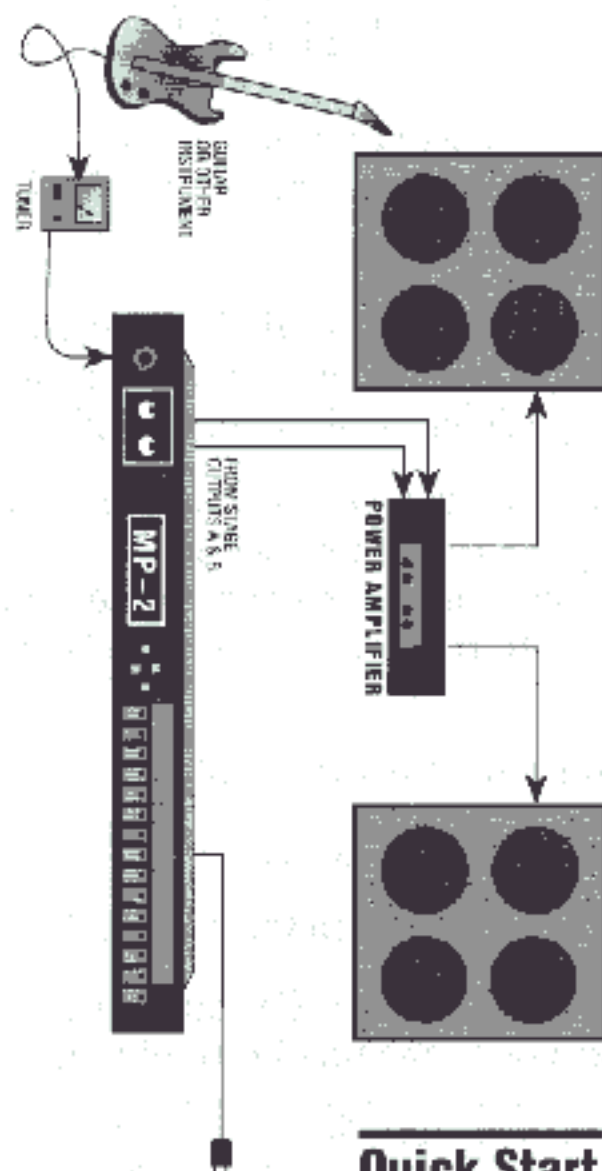

Quick Start Connection

Getting Started

This chapter explains all of the MP-2's controls and connections.

Unpacking and Installation

IMPORTANT: The MP-2 is designed to operate only at the voltage printed on the back panel. It is not possible to change over or adapt the MP-2 to operate at any other voltage.

Please use an appropriate external voltage converter when attempting to operate the MP-2 in a country with a different AC line voltage.

Rack-mounting the MP-2

The MP-2 is designed to mount in a single rack-unit of (1u) of space in any standard 19" equipment rack. Be sure that it is securely mounted using four standard (10-32) rackmount screws.

About Tubes and the MP-2

The incomparable sound of tube amplification comes with the need for a small amount of simple maintenance to accommodate the nature of tubes, which are somewhat fussier and more delicate than the solid-state electronics used in the rest of the MP-2.

NOTE: To preserve tube life, allow time for the tubes to cool after shutting down the MP-2 before moving. Tube elements are more fragile when hot.


Tubes have a limited life span; it is recommended that the MP-2's tubes be replaced about once every year, or if they show signs of wearing out. Some signs of degrading tube life are:

- **Excess noise on high gain programs**

- "Ringing", squealing or feedback
- Microphonic effects (tapping on the MP-2 causes audible thumps)

Replace the MP-2's tubes only with high-quality, low-noise 12AX7A-7025 tubes. If desired, these can be purchased from ADA (ADA part # 220020).

Controls and Connectors

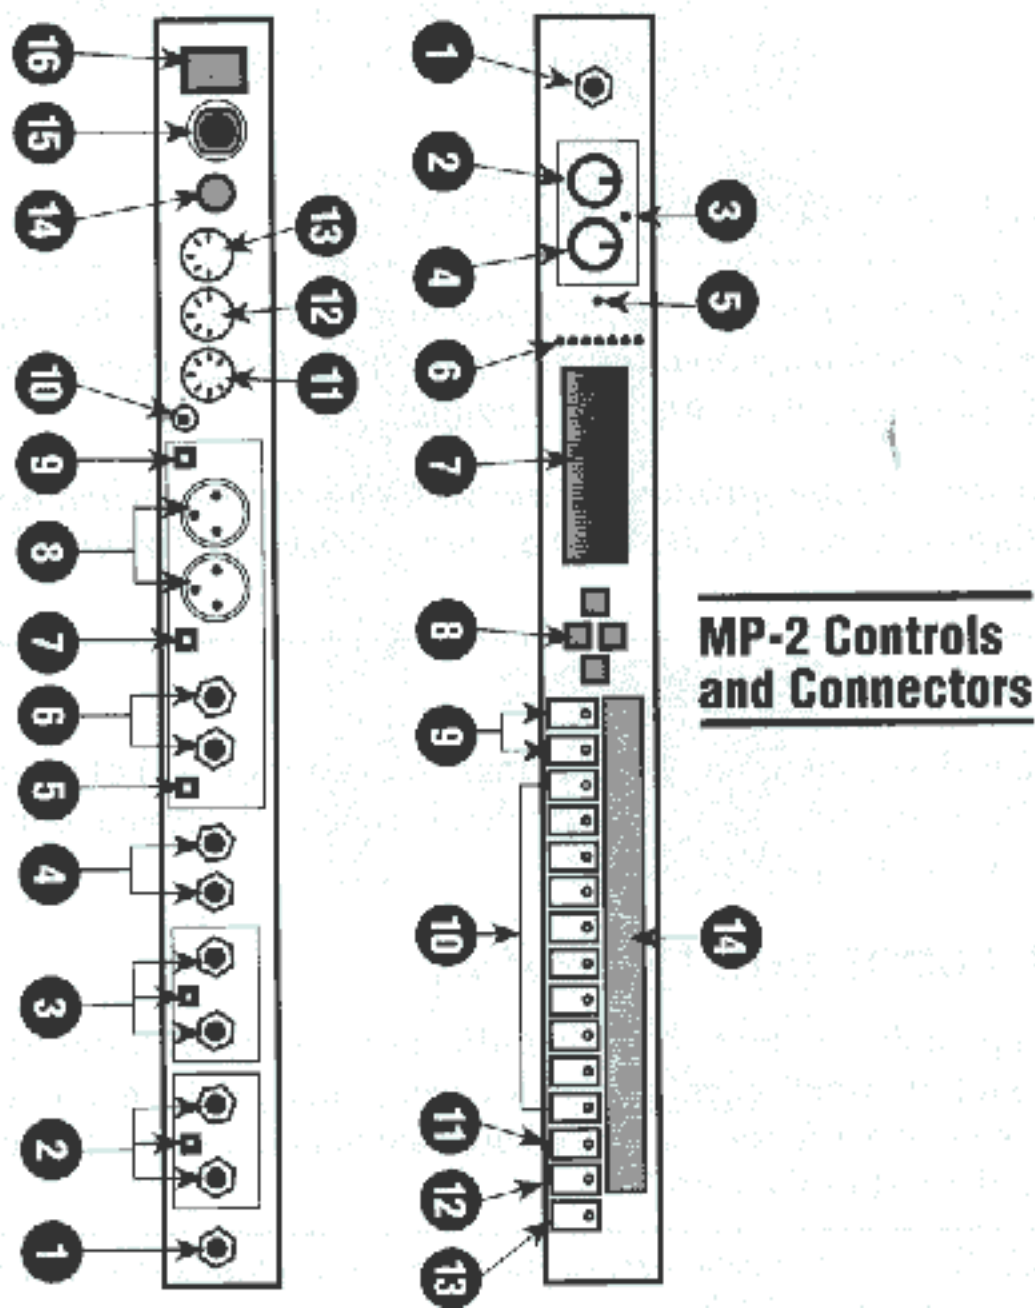

Front Panel (L to R)

- [1] Input Accepts unbalanced 1/4" phone instrument inputs. Maximum level: +12.2 dBV (3.4 volts RMS). This input overrides the rear panel input.
- [2] Output Level control Final adjustment of output level. Follows all software level controls.
- [3] Output Clip LED Indicates overload of output stage.
- [4] Room EQ control Applies tone shaping to compensate for the acoustic effects of different performing venues. Normal setting is straight up (12 o'clock).
- [5] Comp Thresh LED When Compressor is switched in, indicates that the signal is exceeding the compressor threshold.
- [6] Signal LEDs When glowing green: indicates the signal present in that section is 30 dB below clip level.
When glowing red: indicates signal present in that section in 3 dB below clip level.

NOTE: *The Signal LEDs will illuminate regardless of that section's Status (i.e. switched in or out.)*

- [7] Character display 2-rows by 16-characters LCD. Shows status and error messages.
Play mode: shows bank and number of current program. In Controller panel mode, shows mapping of MIDI program change number to MP-2 User program number.
Program and System Edit modes: shows parameter editing information.

- [8] Arrow buttons Left/Right arrows: used to move cursor between parameters and screens in Program and System Edit modes.
Up (Yes)/Down (No) arrows: used to adjust the value of the currently selected parameter, execute a function, or answer a query.
- [9] Bank Select buttons In Play mode, increases (Bank Up) or decreases (Bank Down) the bank number from which a program may be called.
- [10] Number buttons (0-9) In Play mode, selects which program in a bank will be recalled.
- [11] Preset/User button In Play mode, switches between factory Preset program banks and User program banks.
- [12] Program Edit button Enters and exits Program Edit mode. Initiates Store function when exiting Program Edit mode. LED is lit when in Program Edit mode.
- [13] System Edit button Enters and exits System Edit mode. LED is lit when in System Edit mode.
- [14] Edit functions When in Program Edit mode, the Bank Select, Number, and Preset/User buttons select the parameter sections indicated in the gray field above them.

Rear Panel (R to L)

- [1] Input Accepts unbalanced 1/4" phone instrument inputs. Maximum level: +12.2 dBV (3.4 volts RMS). Plugging into the front panel input overrides this input.
- [2] Effects Loop A
- Send Carries channel A of signal following Stereo Chorus. Must be switched on in software to be active.
- Level Switch This switch sets both the level from the Send and expected at the Return for Effects Loop A.

Return (Insert) Carries return from external effects units. Must be switched on in software to be active. Mix is adjustable in software.

[3] Effects Loop B
Send

Carries channel B of signal following Stereo Chorus. Must be switched on in software to be active.

Level Switch

This switch sets both the level from the Send and expected at the Return for Effects Loop B.

Return (Insert)

Carries return from external effects units. Must be switched on in software to be active. Mix is adjustable in software.

[4] Stage Outputs

Stereo unbalanced 1/4" phone outputs which do not pass through Cabinet Emulator circuitry. Intended for use as main outputs for connection to a sound system. Maximum output level: +17.1 dBV

Recording Outputs

[5] Speaker Cabinet Emulator switch Selects emulation for the Recording Outputs only of either a 2-12" cabinet or a 4-12" cabinet.

[6] Unbalanced Outputs Stereo unbalanced 1/4" phone outputs which pass through Cabinet Emulator circuitry. Maximum output level: +17.1 dBV

[7] XLR Level switch (Line/Mic) This switch sets the output level from the balanced (XLR) outputs.

[8] Balanced Outputs Stereo balanced XLR outputs which pass through Cabinet Emulator circuitry. The signal from these outputs is identical to the Unbalanced Outputs. Maximum output level is determined by position of XLR Level switch: +12 dBV (Line), -16 dBV (Mic).

[9] Pin 1 (Ground) Lift switch Used to eliminate hum from grounding problems when connecting to mixing consoles, etc.


In the GND (normal) position, pin 1 of the balanced outputs is connected to circuit ground.

In the LIFT position, pin 1 of the balanced outputs is disconnected from circuit ground.

MIDI Connectors

- | | |
|--------------------|---|
| [10] Phantom Power | Input which accepts AC power adapters for ADA MIDI footswitches and connects to pins 6 and 7 of the MP-2's MIDI In jack. When used in conjunction with the proper 7-pin DIN phantom power cable, allows ADA MIDI footswitches to be remotely powered. |
| [11] MIDI In | When connected with a standard MIDI cable, receives data from a MIDI controller. By plugging an ADA AC power adapter to the Phantom Power jack and using a 7-pin DIN phantom power cable from this jack to an ADA MIDI footswitch, power is supplied from this jack to the controller through the MIDI cable. |
| [12] MIDI Out | Carries MIDI data output by the MP-2. |
| [13] MIDI Thru | Carries an exact copy of data received at MIDI In. |
| [14] AC power cord | Plugs into a normal wall outlet. |
| [15] Fuse | Accepts a .5 A (for 117V US models) or .25 A (for 230V export models) Slo-Blo type fuse. |
| [16] Power Switch | Switches MP-2 on and off. |

Connecting the MP-2

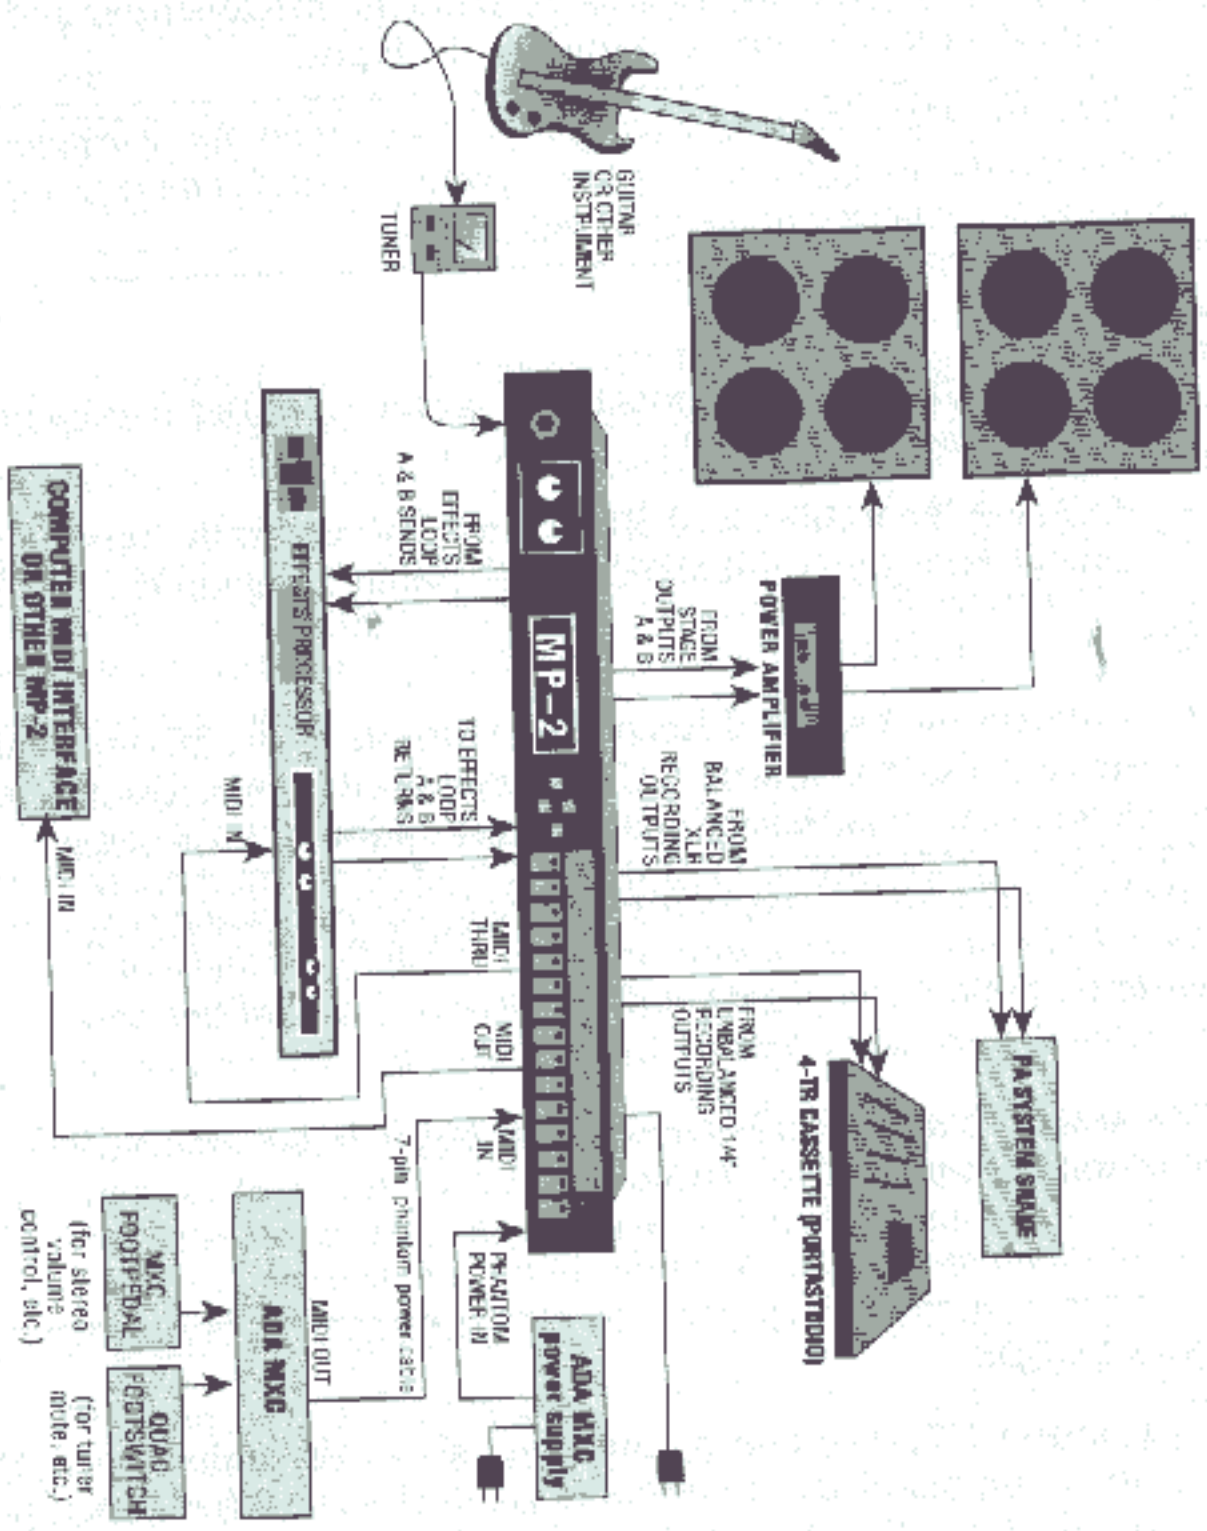

Audio

Input

- Connect instrument's unbalanced 1/4" phone output to the MP-2's front or rear panel input jack. If you are using a tuner for your instrument, plug the instrument into the tuner and connect the tuner's output to the MP-2's input.

NOTE: The MP-2's front panel input jack overrides the rear panel input. Signals going to the rear panel input will be disconnected if an input is connected to the front input jack.

Output

- Connect the Stage Outputs to the power amplifier's unbalanced 1/4" phone input.
- Connect the unbalanced Recording Outputs to the mixing console or recorder's unbalanced 1/4" phone Line inputs.

OR

- Connect the balanced Recording Outputs to the mixing console or recorder's balanced XLR Mic or Line inputs. Use the XLR Level switch on the rear panel to set optimum level range.

NOTE: 1) The MP-2 is capable of output levels high enough to overload the input of most guitar or instrument amplifiers and many other devices. Adjust the front panel Output Level control to avoid unwanted overload distortion.

2) The MP-2's outputs are independently buffered and so may all be used simultaneously, if so desired.

3) For mono operation any single output can be used.

Effects Loops

- Connect Effects Loop A and B Sends to the unbalanced 1/4" phone inputs of any reverb, effects device, or other signal processor. Use either Effects Loop Send for devices that have only a single (mono) input. The Sends and Returns are only active when Effects Loop Status is set to "On".

- **Connect Effects Loop A and B Returns to the unbalanced 1/4" phone outputs of the reverb, effects device, or other signal processor. If the device has only one output, use a Y-cable to split the signal and connect it to both Returns to have effects in both channels. Set output mix of the signal processor to 100% "wet".**
- **Use the Effects Loop Level switches (A and B) to set the Send and Return levels to the optimum match with the external device.**

NOTE: Status for the Effects Loop must be set to "On" and the Wet Mix parameter set greater than 0% for the Returns to be heard.

MIDI

The MP-2 is capable of responding to MIDI program change and continuous controller messages. It is recommended that a MIDI controller capable of accepting at least one footpedal (to be assigned in System Edit mode to Stereo Volume Controller) and one footswitch (to be assigned in System Edit mode to control the Tuner Mute function) be used, such as the ADA MXC. See the System Edit portion starting on page 58 of the Reference chapter for a complete explanation of programming the Stereo Volume Controller and Tuner Mute functions.

- **Connect MIDI In to MIDI Out of ADA MXC or other MIDI controller. Be sure that all required footpedals, footswitches, or other control devices are properly connected to the MXC or other MIDI controller.**
- **Connect MIDI Out to MIDI In of other MIDI devices you wish to control from the MP-2 front panel.**
- **Connect MIDI Thru to MIDI In of other devices you wish to receive the same data from your MIDI controller which the MP-2 receives, such as MIDI-controlled effects processors.**

Sending and Receiving Libraries and Programs

The MP-2 can send or receive one or all of its User programs to another MP-2 or a personal computer running an appropriate librarian or sequencing program. This information is sent over MIDI as System Exclusive Data.

Connections for sending/receiving a library or program to/from another MP-2:

- **Connect MIDI Out from the MP-2 that is sending the data to MIDI In of the MP-2 that is receiving.**

Connections for sending a library or program to a personal computer:

- **Connect the MP-2's MIDI Out to MIDI In of the computer's MIDI interface.**

Connections for receiving a library or program from a personal computer:

- **Connect the MP-2's MIDI In to MIDI Out of the computer's MIDI interface.**

***NOTE:** Some librarian programs may require two-way communication with the MP-2. In this case it is necessary to connect both the MP-2's MIDI Out to the computer's MIDI In and the computer's MIDI Out to the MP-2's MIDI In.*

Phantom Power Input

The Phantom Power jack connects directly to pins 6 and 7 of the MIDI In jack and, when the proper 7-pin DIN cable is used in place of a standard MIDI cable, provides a method of remotely powering an ADA MXC MIDI foot control system. A 25-foot 7-pin DIN Phantom Power cable is available from ADA (Part #401016)

- **Plug the power adapter for the MXC MIDI foot controller into an AC outlet.**
- **Plug the end of the adapter that normally connects to the MXC into the Phantom Power jack.**
- **Connect a 7-pin Phantom Power cable from MIDI Out of the MXC to MIDI In of the MP-2.**

Tutorial

This chapter gives a guided tour of the MP-2's basic functions in a series of lessons. Read this chapter to familiarize yourself with operating the MP-2.

This chapter will introduce you to the basics of using the MP-2 and lead you step by step through the most important functions. Once you have completed the Tutorial, you will be able to create and store your own programs, as well as use the factory Preset programs, and use MIDI to control the MP-2.

But the MP-2 has more features than this Tutorial will touch on. The Reference chapter gives detailed descriptions of every parameter and will answer any questions you may have left after completing the Tutorial.

Basics of the MP-2

Programs

The MP-2 has two different kinds of settings that can be adjusted and stored: those that affect individual sounds, and those that affect the whole MP-2 and don't change when a sound is changed.

All of the settings that define an individual sound are stored collectively as a **program**. Programs can be recalled from the front panel or by MIDI messages from a MIDI controller such as the ADA MXC. Programs are edited in Program Edit mode. Settings that affect the whole MP-2 are not stored as part of a program, but as **global** parameters and edited in System Edit mode. Global parameters, most notably the MIDI functions in System Edit, are in effect all the time, regardless of what program is running.

***NOTE:** The Stereo Volume Controller and Tuner Mute are both global parameters. Some confusion or problems may arise if this idea is not fully understood and kept in mind. For a complete explanation of global settings, see the System Edit portion of the Reference chapter.*

There are two kinds of programs: **Preset** and **User**. Preset programs were created by ADA and the artists we work with. They can be recalled, played, and even edited, but a location containing a Preset program cannot be written to. There are 39 Presets in the MP-2, and a list of these is found in an Appendix at the end of the manual.

User programs are those created by you, the user, usually by modifying Presets or User programs previously created. There are 128 User programs, and these can be both recalled and written (stored) to. If a Preset program is recalled and edited, it can only be stored as a User program.

User programs can be transferred over MIDI from one MP-2 to another, or from an MP-2 to a personal computer running librarian software. This means that, when all the User programs are filled, they can be dumped, or "off-loaded" to the computer through MIDI System Exclusive messages to prevent having to write over User programs in order to store new ones.

MP-2 Modes

The MP-2 has three operating modes: **Play**, **Program Edit**, and **System Edit**.

In Play mode, programs may be recalled for performance from the front panel or through MIDI. The MP-2 is in Play mode whenever it is in neither Program Edit nor System Edit mode. When neither the LEDs in the PRGM EDIT nor SYSTEM EDIT buttons are lit, the MP-2 is in Play mode.

In Program Edit mode, all of the settings (also called **parameters**) contained in a program can be adjusted. The MP-2 is in Program Edit mode when the LED in the PRGM EDIT button is lit. (See page 42 for Reference information on Program Edit mode.)


In System Edit, settings that affect the entire MP-2 and are not stored as part of a program are adjusted. There is only one location for these settings, so they are not stored and recalled as programs are. System Edit mode also contains utilities that allow copying and swapping of programs between locations and other useful functions. The MP-2 is in System Edit mode when the LED in the SYSTEM EDIT button is lit. (See page 58 for Reference information on System Edit mode.)

MP-2 Display

The MP-2 conveys messages, questions, and parameter information through the display.


Play Mode

In Play mode, the display shows whether the MP-2 is running a User or Pre-set program, the program bank and number, and its name.

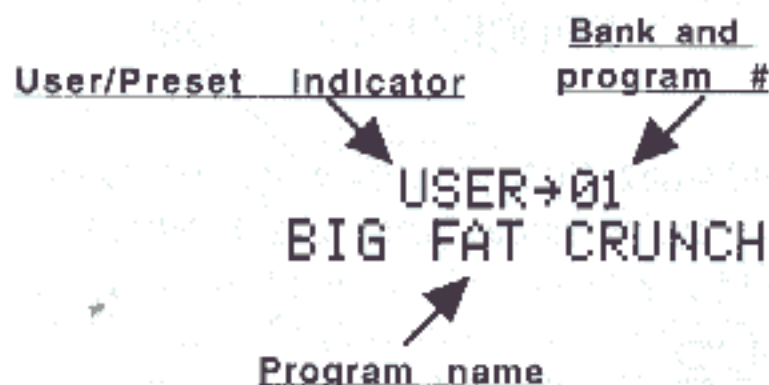

Program Edit Mode

In Program Edit mode, the display shows one or more parameters in the currently selected section along with their values. The **cursor** indicates which parameter is currently selected for editing. Arrows in the upper left and/or lower right corners indicate that there are other parameter screens in that section. Parameter screens are explained on page 24 in the Editing Basics discussion.

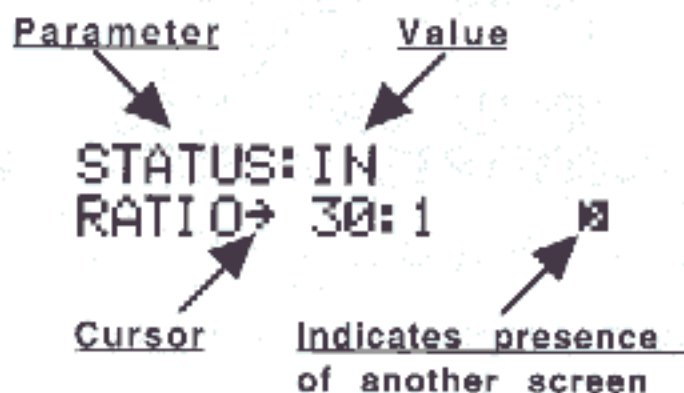


System Edit Mode

The System Edit mode display is essentially the same as the Program Edit mode display, but in many cases the parameters take the form of a question asking if you wish to execute the named System function. These questions are answered by pressing the "^" ("Yes") or "v" ("No") button, indicated by an arrow pointing up. These up-facing arrows also sometimes indicate submenus or steps in a procedure.

System function name

▣ COPY SINGLE PROGRAMS? ▣

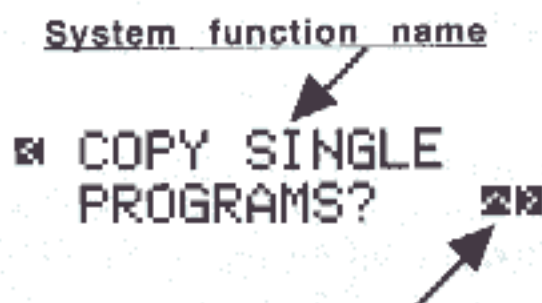A diagram showing the text "System function name" with an arrow pointing to the question "COPY SINGLE PROGRAMS?". To the right of the question is a button symbol "▣", with another arrow pointing to it from the text below.

Indicates that procedure is continued by pressing "Yes" ("^") button

Powering Up

- After connecting the MP-2 as described in the Getting Started chapter, turn on the power switch on the rear panel. Be sure the Output Level control is turned all the way down and the Room EQ control is set to Normal.

When switched on, the MP-2 will first display a screen with ADA's name, then a screen identifying the unit as an MP-2 and showing the software version installed:

Software Version #

MP-2: Ver. 1.00
COPYRIGHT 1993

A diagram showing the text "Software Version #" with an arrow pointing to the first line of the software version display "MP-2: Ver. 1.00".

The MP-2 is a tube preamp, and tubes take a few moments to warm up when they are first switched on. During this period, the MP-2's display will show this message:

STAND BY...
Tubes Warming Up

- Slowly raise the Output Level control until the volume is comfortable. Be careful not to overload the input of the amplifier or mixer into which the MP-2 is plugged.

Play Mode

After the tubes have warmed up, the display will say something like this:

USER→01
BIG FAT CRUNCH

Notice that the LEDs in the PRGM EDIT and SYSTEM EDIT buttons are both unlit. The MP-2 is now in Play mode. The top line indicates that the MP-2 is currently running User program 1, while the bottom line is the program's name.


Recalling Programs



1. Select User or Preset programs



2. Select the desired bank.

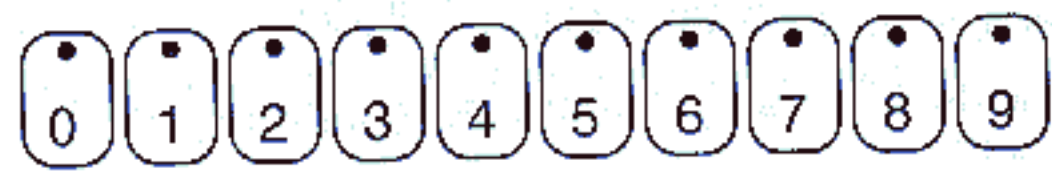

3. Choose the desired program in the selected bank.

Recalling programs in Play mode is as simple as could be:

To step through programs:

- Press the "**^**" and "**v**" (up and down arrow) buttons to increment and decrement the program number. When the arrow button is released, the new program is recalled.
- Try pressing the "**^**" button a few times and watch the User program number increase.

Play through a few of the User programs to see that the programs are actually changing.

- Press the "**v**" button until you reach User program 1, then press it one more time.

Note that the MP-2 "wraps around" to the highest number, User 128.

USER → 128
DEFAULT PROGRAM

Right now, the first 39 User programs contain the same settings as the 39 Preset programs. Of course, these User programs can be replaced at any time with modified versions, or other programs that have been copied to them or swapped with them. The Preset programs can be altered while they are running, but the Preset program locations cannot be stored into, so they always remain unchanged.

To switch between User and Preset Programs

- Press the PRESET/USER button on the right side of the front panel.

The MP-2 switches to Preset program 1.

PRESET → 01
BIG FAT CRUNCH

- Use the "**^**" and "**v**" buttons to step through the Preset programs.

Program Edit mode

- Press the PRGM EDIT button to enter Program Edit mode.

The LED in the button will go on and the display will say:

PROGRAM EDIT...
SELECT PARAMETER

Editing Basics

When an instrument is plugged into the MP-2, its signal passes through a number of different sections, each of which has a different function. The sections are indicated in the gray field above the Bank Select, Number, and Preset/User buttons.

Each section has several parameters that can be adjusted. A program is simply a stored complete set of all the parameters in all the sections. The cursor always indicates which parameter is currently selected for editing.

Some sections have more parameters than can fit in the display at one time. In that case, there may be more than one screen of parameters. The presence of additional screens is indicated by an arrow symbol in the lower right corner of the display (meaning there is one or more following screens) or the upper left corner (meaning there is one or more preceding screens).

To select a parameter for editing:

- Use the "<" and ">" buttons (left and right arrow) to move the cursor from parameter to parameter.

The parameter that is currently selected for editing is always indicated by the cursor, which is an arrow symbol (->) found between the parameter name and its value.

To move between parameter screens:

- Press the ">" button repeatedly to reach a following screen; after stepping through all the parameters on the current screen, the next button press will step to the next screen.

Similarly, the left arrow button is pressed repeatedly to reach preceding screens.

Recalling programs in Play mode is as simple as could be:

To step through programs:

- Press the "**^**" and "**v**" (up and down arrow) buttons to increment and decrement the program number. When the arrow button is released, the new program is recalled.
- Try pressing the "**^**" button a few times and watch the User program number increase.

Play through a few of the User programs to see that the programs are actually changing.

- Press the "**v**" button until you reach User program 1, then press it one more time.

Note that the MP-2 "wraps around" to the highest number, User 128.

```
USER→128
DEFAULT PROGRAM
```

Right now, the first 39 User programs contain the same settings as the 39 Preset programs. Of course, these User programs can be replaced at any time with modified versions, or other programs that have been copied to them or swapped with them. The Preset programs can be altered while they are running, but the Preset program locations cannot be stored into, so they always remain unchanged.

To switch between User and Preset Programs

- Press the **PRESET/USER** button on the right side of the front panel.

The MP-2 switches to Preset program 1.

```
PRESET→01
BIG FAT CRUNCH
```

- Use the "**^**" and "**v**" buttons to step through the Preset programs.

Program Edit mode

- Press the **PRGM EDIT** button to enter Program Edit mode.

The LED in the button will go on and the display will say:

```
PROGRAM EDIT...
SELECT PARAMETER
```

Editing Basics

When an instrument is plugged into the MP-2, its signal passes through a number of different **sections**, each of which has a different function. The sections are indicated in the gray field above the Bank Select, Number, and Preset/User buttons.

Each section has several parameters that can be adjusted. A program is simply a stored complete set of all the parameters in all the sections. The cursor always indicates which parameter is currently selected for editing.

Some sections have more parameters than can fit in the display at one time. In that case, there may be more than one **screen** of parameters. The presence of additional screens is indicated by an arrow symbol in the lower right corner of the display (meaning there is one or more following screens) or the upper left corner (meaning there is one or more preceding screens).

To select a parameter for editing:

- Use the "**<**" and "**>**" buttons (left and right arrow) to move the cursor from parameter to parameter.

The parameter that is currently selected for editing is always indicated by the **cursor**, which is an arrow symbol (->) found between the parameter name and its value.

To move between parameter screens:

- Press the "**>**" button repeatedly to reach a following screen; after stepping through all the parameters on the current screen, the next button press will step to the next screen.

Similarly, the left arrow button is pressed repeatedly to reach preceding screens.



To adjust the value of the selected parameter:

- Use the "**^**" and "**v**" buttons (up and down arrow) to modify the value of the selected parameter.

Each time one of these buttons is pressed, the value is increased or decreased by one. If the parameter is not a number but a **toggle**, or switch-type of setting that only has two values, the up and down arrow buttons are used to change from one value to the other. These buttons are also used to answer Yes/No questions the MP-2 sometimes displays.

- Hold down either button to cause the selected parameter to **scroll**, or automatically count, up or down through its entire range of available values.

*NOTE: Pressing the "**^**" and "**v**" buttons simultaneously sets the selected parameter to the factory default value.*

To edit a program in Program Edit mode:

- 1) Press the Select button of the section you wish to edit. The LED in the button will illuminate
- 2) Use the < and > (left and right arrow) buttons to move the cursor to the parameter to be adjusted.
- 3) Use the ^ and v (up and down arrow) buttons to change the value of the parameter. Changes made to a parameter are always heard immediately.
- 4) Repeat steps 1 through 3 until all parameters have been adjusted as desired.
- 5) Store the program.

Selecting and Editing Parameters

- Press the Tube Voicing button to select the Tube Voicing section. The button's LED will light up and the display will show:

```
VOICE→9
ULTIMATE HI GAIN
```

There are no arrows in the upper left or lower right corner; the Tube Voicing section has only one screen of parameters.

- Press the "**v**" button twice to change the Tube Voicing value. The display shows:

```
VOICE→7
WARM HI GAIN
```

- Press the Drive & Master Level button to select the Drive & Master Level section. Now the display shows:

```
DRIVE→70 OD: 100
MASTER:69
```

- Press the ">" button once to move the cursor to the Overdrive parameter.
- Press and hold the "**v**" button. The Overdrive value will count down. Set its value to 75.

Because the value will scroll quickly, it is difficult to stop at precisely the right value. Lift your finger from the arrow button when the value is close to the desired setting, then use individual button presses to step it to the exact desired value.

- Press the Stereo Chorus button to select the Stereo Chorus section.

Notice the arrow indicating a following screen:

```
STATUS: IN
```



- Press the ">" button once to step to the next screen of parameters.
- Press the ">" button one more time to move the cursor to the Rate parameter.
- Press the "^" button three times to increase the Rate to 0.5 Hz.

DEPTH: 34 %
RATE: 0.5 Hz

Editing the Graphic EQ

The Graphic EQ display is a little different from most of the other sections. Instead of using letters or numbers to show the value of a parameter, the Graphic EQ gives a simple visual plot that clearly indicates the whole equalization curve.

- Press the Graphic EQ button to select the Graphic EQ section.

===== 100Hz
----- +10dB

The horizontal lines represent the boost/cut settings of each of the nine bands of the Graphic EQ, with the band currently selected having a double line (in this case, on the far left). (Bands set to 0 dB of boost/cut also have double lines, but the lines are more widely spaced and easily distinguished from the selected band.) On the right side of the display, the currently selected band is shown on top, and the amount of boost/cut applied on the bottom.

The "<" and ">" buttons move the cursor to the band to be adjusted, and the "^" and "v" buttons change the amount of boost/cut applied at that band in two dB steps up to ± 12 dB.

- Press the ">" button until the upper right corner of the display shows "2.2KHz."
- Press the "^" button three times to change the amount of boost/cut to +2 dB.

===== 2.2KHz
----- +2dB

Comparing Edited Programs to Stored Versions

When editing a program it is desirable to be able to compare the current version with the original, stored version without leaving the edit mode.

- Press the COMPARE button to engage the Compare function. The display will tell you that you are now listening to the stored version:

INITIAL
SETTINGS

- Press the COMPARE button again and the MP-2 toggles back to the edited version:

MODIFIED
SETTINGS

Each press of the button causes the MP-2 to toggle.

Naming User Programs

At this point, it would be good to give this program a different name to distinguish it from the Preset it started out as.

- Press the "PROGRAM TITLE" button to select the Program Title section.

Editing in this section can be thought of in the same way as in other sections if you consider each character in the name as a parameter, the underline at the bottom as the cursor, and the choice of letters, numbers, and symbols as the available values.

The "<" and ">" buttons move the cursor from character to character in the name, while the "^" and "v" buttons choose the desired letter, number, or symbol for the selected character. Pressing the "^" and "v" buttons at the same time clears the entire name.

- Press the ">" button until the underline is in the last space in the right corner.
- Hold the "^" button down and scroll through until the number "2" comes up. (The numbers follow the lower case letters, which are after the upper case letters.)

- Press the ">" button once to step to the next screen of parameters.
- Press the ">" button one more time to move the cursor to the Rate parameter.
- Press the "^" button three times to increase the Rate to 0.5 Hz.

DEPTH: 34 %
RATE: 0.5 Hz

Editing the Graphic EQ

The Graphic EQ display is a little different from most of the other sections. Instead of using letters or numbers to show the value of a parameter, the Graphic EQ gives a simple visual plot that clearly indicates the whole equalization curve.

- Press the Graphic EQ button to select the Graphic EQ section.

===== 100Hz
+10dB

The horizontal lines represent the boost/cut settings of each of the nine bands of the Graphic EQ, with the band currently selected having a double line (in this case, on the far left). (Bands set to 0 dB of boost/cut also have double lines, but the lines are more widely spaced and easily distinguished from the selected band.) On the right side of the display, the currently selected band is shown on top, and the amount of boost/cut applied on the bottom.

The "<" and ">" buttons move the cursor to the band to be adjusted, and the "^" and "v" buttons change the amount of boost/cut applied at that band in two dB steps up to ± 12 dB.

- Press the ">" button until the upper right corner of the display shows "2.2KHz."
- Press the "^" button three times to change the amount of boost/cut to +2 dB.

===== 2.2KHz
+2dB

Comparing Edited Programs to Stored Versions

When editing a program it is desirable to be able to compare the current version with the original, stored version without leaving the edit mode.

- Press the COMPARE button to engage the Compare function. The display will tell you that you are now listening to the stored version:

INITIAL
SETTINGS

- Press the COMPARE button again and the MP-2 toggles back to the edited version:

MODIFIED
SETTINGS

Each press of the button causes the MP-2 to toggle.

Naming User Programs

At this point, it would be good to give this program a different name to distinguish it from the Preset it started out as.

- Press the "PROGRAM TITLE" button to select the Program Title section.

Editing in this section can be thought of in the same way as in other sections if you consider each character in the name as a parameter, the underline at the bottom as the cursor, and the choice of letters, numbers, and symbols as the available values.

The "<" and ">" buttons move the cursor from character to character in the name, while the "^" and "v" buttons choose the desired letter, number, or symbol for the selected character. Pressing the "^" and "v" buttons at the same time clears the entire name.

- Press the ">" button until the underline is in the last space in the right corner.
- Hold the "^" button down and scroll through until the number "2" comes up. (The numbers follow the lower case letters, which are after the upper case letters.)

```
PROGRAM TITLE
BIG FAT CRUNCH2
```

Storing Programs

Since enough changes have been made that it would be annoying to lose them, our modified and renamed program should now be stored before continuing. The MP-2 asks if you wish to store whenever you attempt to exit Program Edit mode after having altered any of a program's parameters.

- Press the PRGM EDIT button to exit Program Edit mode. The display will briefly show:

```
PROGRAM DATA HAS
BEEN MODIFIED
```

then change to:

```
STORE IN USER
PROGRAM→128? Y/N
```

The User program value shown is the last User program used by the MP-2. Note that only User programs are available for storing.

To store a program in the User program shown:

- Press the "^" button to answer "Yes."

To select a different User program in which to store a program:

- Use the BANK UP, BANK DOWN, and number buttons in the same fashion as recalling a program in Play mode to select the desired User program.
- Press the "^" button to answer "Yes."

After answering "Yes," the MP-2 will ask for confirmation:

```
ARE YOU SURE?
PROGRAM: 128 Y/N
```

- Press the "^" button again to answer "Yes" and complete the store.

To abort the store process and return to editing:

- Press the PRGM EDIT button to reenter Program Edit mode. Select a section and continue editing. All parameters will be as they were when you first attempted to exit Program Edit mode.

To abort the store process and discard the changes to the program:

- Press the "v" button when the "Store in User Program 128? Y/N" message appears to answer "No."

```
ABANDON EDITS?
Y/N
```

- Press the "^" button to answer "Yes" when the above message appears.

```
ABANDONING EDIT
SESSION
```

After the above message appears, the MP-2 will be in Play mode.

Pressing the "v" button to answer "No" to the abandon message will return you to the store message.

Memory Protection

The MP-2 has a memory protection feature in the System Edit mode (discussed later) which prevents any User program from being written to. The factory default setting for this feature is "Off," however, should memory protection be turned on, it adds an additional confirmation message to the store process.

After responding "Yes" to the confirmation ("Are You Sure?") message, the MP-2, when Memory Protect is set to "On," will briefly show this message:

MEMORY PROTECT
IS ON

then offer the chance to turn off memory protection:

DISABLE PROTECT
AND STORE?

- Press the "^" button to answer "Yes" and turn off memory protection. The display will return to the confirmation message, only now it will allow the store to be completed.

NOTE: Once Memory Protect has been disabled in this fashion, it is no longer active unless reenabled in the System Edit mode.

- Pressing the "v" button to answer "No" to the disable message returns you to the abandon message.

Setting Input and Output Levels

The MP-2 contains a number of level controls that serve different purposes. Getting the best sound requires that the MP-2's input and output levels be properly adjusted. Here are a few hints:

- 1) **Modifying an existing preset is the best way to optimize the signal-to-noise ratio.**
- 2) Use the signal indicators on the front panel to insure that the MP-2 is being driven with an adequate amount of signal, and not overloaded undesirably. Try to set signal level so that the LEDs are lighting green on a regular basis. Remember that too little signal degrades the signal-to-noise ratio.
- 3) Avoid clipping the MP-2's internal circuitry; watch for signal LEDs that are frequently lighting red or for frequent lighting of the Clip LED. Two common causes of internal overload are large amounts of boost in the EQ sections or excessive Gain in the Compressor section.

- 4) The Drive parameter in the Drive and Master Level section controls the amount of gain applied by the tube preamp. High gain Tube Voicings also have an Overdrive parameter in this section for even more gain.
- 5) The Master parameter in the Drive and Master Level section controls the amount of signal fed from the tube preamp to the rest of the MP-2. It is useful for balancing relative volume between your User programs.
- 6) The overall level ("room volume") is controlled by the front panel Output Level control.

Using the Stereo Effects Loop

The MP-2's Stereo Effects Loop provides a way to use the MP-2 with additional effects without requiring an external mixer. The side-chain design keeps the original ("dry") signal within the MP-2, and each channel has the capability of mixing the Effects Return ("wet") signal with the original.

- **Connect Effects Loop A Send to the left input of an external signal processor, and the output of the processor to Effects Loop A Return.**
- **Connect Effects Loop B Send to the right input of an external signal processor, and the output of the processor to Effects Loop B Return.**
- **Set up a reverb or some other easily distinguishable effect on the external signal processor.**
- **Enter Program Edit mode and press the Stereo Effects Loop button to select the Stereo Effects Loop section. The Status parameter should be set to "In."**

STATUS→ IN



- Press the ">" button to step to the next screen.
- Hold down the "^" button until Mix A is set to 75%

MIX A→75% WET
MIX B:25% WET

This should make the effects very noticeable on the left channel.

- Press the "<" to step back to the first screen.
- Press the "v" button to change the Status to "Out."

The effects should disappear, as the effects return is disconnected.

- Press the PRGM EDIT button to exit Program Edit mode and store the program if you wish.

System Edit Mode

- Press the SYSTEM EDIT button to enter System Edit mode. The display will show:

```
▣ MIDI FUNCTION
      MENU?   ▣▣
```

System Edit mode contains the MP-2's MIDI functions (except Real-Time MIDI, which will be discussed shortly), and system utilities such as the Copy and Swap Program features, Memory Protect and Panel Mode.

It is organized as a main menu which is navigated in the same way as the parameter screens in Program Edit mode. Some menu selections have sub-menus or additional screens.

NOTE: For most of the rest of the Tutorial, it is necessary to have a MIDI controller capable of sending program change and continuous controller messages connected to the MP-2.

Copying Programs

It is useful to copy programs when you want to modify an existing program and store the edited version, especially if the original is a Preset which cannot be stored into its original location. Programs can only be copied to User programs.

- Press the ">" button twice until this display shows:

```
▣ COPY SINGLE
      PROGRAMS? ▣▣
```

Notice that there are three arrows. This indicates that there are both preced-

ing and following menu selections, as well as additional screens.

- Press the "^" button once to step to the second screen.

```
▣ COPY→01 PRESET
      TO:128 USER▣
```

Note that there is still an up arrow in the lower right corner, meaning that there is still another screen after this one, which will be accessed after the source and destination locations have been specified.

The source and destination locations are selected just as if they were being recalled in Play mode: using the BANK UP, BANK DOWN, and number buttons.

- Press the BANK UP button and then the "2" button to select Preset 12 as the source location.

```
▣ COPY→12 PRESET
      TO:128 USER▣
```

- Press the ">" button to move the cursor to the bottom row.
- Press the BANK UP button and then the "5" button to select User 5 as the destination location.

```
▣ COPY:12 PRESET
      TO→05 USER▣
```

- Press the "^" button to continue the copy operation. The display will show a confirmation message:

```
ARE YOU SURE?
                Y/N
```

- Press the "^" button to answer "Yes."

```
DONE!
```

Preset program 12 has now been copied into User program 5.

MIDI Parameters

Setting the MIDI Channel

The most basic MIDI parameter is setting the channel over which the MP-2 will send and receive MIDI data.

- Press the "<" button twice so that the display shows:

```
▣ MIDI FUNCTION
  MENU?  ▣▣
```

- Press the "^" button to access the MIDI Function submenu.
- Hold the "v" button down until the MIDI channel scrolls to "1".

```
▣ SET MIDI
  CHANNEL→1  ▣
```

Making a MIDI Program Change Map

The MP-2's MIDI Program Change Map lets any User program be recalled by any MIDI program change message. The map is simply a list of MIDI program change numbers, with each one assigned to an MP-2 User program.

- Press the ">" button once so that the display shows:

```
▣ EDIT MIDI
  MAPPING?  ▣▣
```

- Press the "^" button to access the MIDI Program Change Map.
- Press the "^" or "v" button (whichever is appropriate) until MIDI program change 10 is selected.

As you step through the map, notice that the mapped User program is shown for each MIDI program change number.

```
▣ MIDI IN→10
  MAP TO USER: 10 ▣
```

- Press the ">" button to move the cursor to the bottom line.
- Press the "v" button until User program 6 is selected.

```
▣ MIDI IN:10
  MAP TO USER→06 ▣
```

- Press the "<" button twice to step back to the first screen.

With this mapping, sending MIDI program change number 10 to the MP-2 will cause User program 6 to be recalled.

Using a MIDI Continuous Controller for Remote Editing

One of the most powerful programming features of the MP-2 is its ability to be remotely programmed through MIDI. With the Pedal Edit feature, it is not necessary to be within reach of the MP-2 to adjust a parameter value in Program Edit mode; the pedal is used in place of the "v" and "^" buttons. When in Program Edit mode, the controller assigned to Pedal Edit will change the value of whatever parameter is currently selected.

NOTE: When the Real-Time MIDI section of Program Edit mode is selected, the Pedal Edit feature is only active for the Sense, Min and Max parameters.

- Press the ">" button until the display shows:

```
▣ PEDAL EDIT
  CONT.# →31  ▣
```

- Connect a MIDI Continuous Controller, such as the ADA CCP/MXC combination, to the MP-2's MIDI In. Be sure that the controller is set to the same MIDI channel as the MP-2.

NOTE: If the MIDI Mismatch Warning feature in System Edit is set to "ON," the MP-2 will display the error messages on the following page if it receives MIDI data on a channel other than its own.

MIDI CHANNEL MISMATCH

CHECK MIDI SETTINGS

- Move the controller slightly. The MP-2 will detect the MIDI Continuous Controller number and change the Pedal Edit value to match it.

The Pedal Edit value can also be set with the "v" and "^" buttons.

The assigned controller will now perform remote editing when the MP-2 is in Program Edit mode.

Programming MIDI Control of Output Volume

The MP-2's output volume can be controlled through MIDI. This is a global controller which affects **all** programs and does not change value when a program is changed. If, for example, Stereo Volume Controller is set to 50% and the program changed, the Stereo Volume Controller will remain at 50% regardless of any settings in the new program. This is useful for maintaining your overall balance level within the band.

- Press the ">" button once so that the display shows:

▣ STEREO VOLUME CONT. #→OUT ▣

- Connect a MIDI continuous controller, such as the ADA CCP/MXC combination, to the MP-2's MIDI In. Be sure that the controller is set to the same MIDI channel as the MP-2.

NOTE: If the MIDI Mismatch Warning feature in System Edit is set to "ON," the MP-2 will display the previously shown error message if it receives MIDI data on a channel other than its own.

- Move the controller slightly. The MP-2 will detect the MIDI continuous controller number and change the Stereo Volume Controller value to match it.

▣ STEREO VOLUME CONT. #→7 ▣

The Stereo Volume Controller value can also be set with the "v" and "^" buttons.


- Press the SYSTEM EDIT button to exit System Edit mode.

Real-Time MIDI (RTM)

Real-Time MIDI (RTM) is one of the MP-2's most powerful features, allowing control of virtually any MP-2 program parameter in performance through MIDI. The MP-2 can make up to sixteen assignments of MIDI controllers to MP-2 parameters for each program. Each assignment is called a **slot**. RTM assignments are made in Program Edit mode and used in Play mode.

There are two modes for making RTM assignments: Quick and Expert. Expert mode allows more detailed programming at the expense of taking a little more time to do. Quick mode is an extremely fast method of making assignments but does not allow them to be as finely tailored. See page 55 in the Reference chapter for complete information on programming RTM assignments in Expert mode.

Mapping MIDI Controllers to MP-2 Parameters with RTM

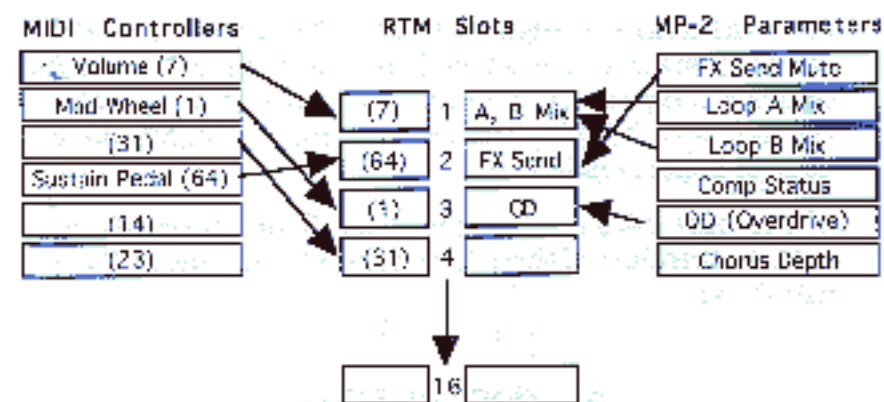

- Connect a MIDI continuous controller, such as the ADA CCP/MXC combination, to the MP-2's MIDI In. Be sure that the controller is set to the same MIDI channel as the MP-2.

NOTE: If the MIDI Mismatch Warning feature in System Edit is set to "ON," the MP-2 will display the previously shown error message if it receives MIDI data on a channel other than its own.

- Press the PRGM EDIT button to enter Program Edit mode.
- Press the "REAL-TIME MIDI" button to select the RTM section. The first screen sets the edit mode.

Making RTM Assignments in Quick Mode

- If RTM Edit Mode is not set to "Quick", press the "v" button once to toggle it from "Expert" to "Quick."

SELECT RTM EDIT
MODE→QUICK

- Press the ">" button to step to the next screen.

MOVE PEDAL OR
PRESS SWITCH

- Move the controller slightly. The MP-2 will detect the MIDI controller number and whether it is a switch-type or continuous controller, then assign it to the slot, although it will not display the number. (Viewing controller number assignments can be done in Expert mode.)

The display will show the parameter, if any, currently assigned to that controller. If there is no current assignment, the display will show:

PARAMETER→
UNASSIGNED

- Use the "v" and "^" buttons to choose the parameter you wish to control from the picklist of available choices.

Notice that only toggle parameters are available when a switch-type controller is detected, and only variable parameters are available when a continuous controller is detected.

- Press the ">" arrow once to step to the next screen. This is the RTM Preview function.

REAL TIME MIDI
PREVIEW

- Operate the controller and check that the effect is satisfactory.
- Press the "<" button when you are finished previewing and the display will return to the "Move Pedal or Press Switch" message. You are ready to make your next assignment.

The Next Step

Now that you have completed the MP-2 Tutorial, you should be able to plug in and get great sounds. But there is much more yet to discover. See the Reference chapter for complete descriptions of all the MP-2's features, and feel free to experiment to find out for yourself how the MP-2 can work for you.

Reference

This chapter contains detailed explanations of every MP-2 function. Use it when you are trying to get information on a specific feature.

Play Mode

In Play mode Preset and User programs can be recalled, and real-time MIDI control is active.

To select a Preset program:

- Be sure the LEDs in all panel buttons are off. If the PRGM EDIT or SYSTEM EDIT button LEDs are lit, press the button to exit the edit mode and extinguish the LED.
- If the top line of the display says "USER," press the PRESET/USER button to make it say "PRESET."
- Use the BANK UP or BANK DOWN button to select the desired bank (0 or 1).
- Press one of the number buttons (0-9) to select the Preset program within the selected bank.

The available range of numbers is 01-39.

OR

- Use the "▲" and "▼" (up and down arrow) buttons to step through the Preset programs.

To select a User program:

- Be sure the LEDs in all panel buttons are off. If the PRGM EDIT or SYSTEM EDIT button LEDs are lit, press the button to exit the edit mode and extinguish the LED.
- If the top line of the display says "PRESET," press the PRESET/USER button to make it say "USER."

- Use the **BANK UP** and **BANK DOWN** buttons to select the desired bank.
- Press one of the number buttons (0-9) to select the User program within the selected bank.

The available range of numbers is 01-128.

OR

- Use the "**^**" and "**v**" (up and down arrow) buttons to step through the User programs.

Using Real-Time MIDI in Play Mode

Real-Time MIDI (RTM) lets the user have dynamic, real-time control through MIDI over up to sixteen MP-2 parameters. The assignment of MIDI controllers to parameters is done in the **Real-Time MIDI** section in Program Edit mode. After programming is finished, RTM is operated in Play mode.

To activate a MIDI controller's link to a parameter, the controller must be moved past the position that corresponds to the current value of the parameter. Moving the controller past this point "activates" the parameter. When there are multiple parameters assigned to a single controller, the controller will usually need to be "swept", or moved through its entire range, to activate all parameters. (This is also true when using RTM Preview in Program Edit mode.)

Program Edit Mode

In Program Edit mode, all sound parameters and MIDI parameters that are specific to each program are defined.

To enter Program Edit mode:

- Press the **PRGM EDIT** button. The LED will light.

To select and adjust a parameter:

- Press the button corresponding to the section containing the parameter to be adjusted (for example, Tube voicing, Graphic EQ, Stereo Effects Loop, etc.).
- Use the "**<**" and "**>**" (left and right arrow) buttons to move the cursor (indicated by "**>**") to the parameter to be adjusted.

- Some sections have more than one screen of parameters, indicated by an arrow in the lower right corner.



After stepping through all parameters in a screen, pressing the "**>**" button will step the display to the following screen, if there is one.

Similarly, previous screens are reached by pressing the "**<**" button to reach the first parameter on a screen, then once more to step to the preceding screen.

- Once the desired parameter is selected, use the "**^**" and "**v**" (up and down arrow) buttons to adjust the value. Pressing the button once increments or decrements the value by one; holding the button down causes the value to scroll.

To exit Program Edit mode:

- Press the **PRGM EDIT** button. If any parameters have been changed, this initiates the Store sequence described below. When that sequence is complete, the LED will go out and the MP-2 will be in Play mode.

Storing, Abandoning, and Resuming Edits

The MP-2 asks if you wish to store whenever you attempt to exit Program Edit mode after having altered any of a program's parameters.

- Press the **PRGM EDIT** button to exit Program Edit mode. The display will briefly show:

```
PROGRAM DATA HAS
BEEN MODIFIED
```

then change to:

```
STORE IN USER
PROGRAM→128? Y/N
```

The User program value shown is the last User program used by the MP-2. Note that only User programs are available for storing.

- Use the **BANK UP**, **BANK DOWN**, and number buttons in the same fashion as recalling a program in Play mode to select a User program other than the one shown.
- When the desired User program is selected, press the "**^**" button to answer "Yes" to the query. The MP-2 will ask for confirmation:

```
ARE YOU SURE?
PROGRAM: 128  Y/N
```

- Press the "**^**" button again to answer "Yes" and complete the store.

To abort the store process and return to editing:

- Press the **PRGM EDIT** button to reenter Program Edit mode. Select a section and continue editing. All parameters will be as they were when you first attempted to exit Program Edit mode.

To abort the store process and discard the changes to the program:

- Press the "**v**" button when the "Store in User Program 128? Y/N" message appears to answer "No."

```
ABANDON EDITS?
                Y/N
```

- Press the "**^**" button to answer "Yes" when the above message appears.

```
ABANDONING EDIT
SESSION
```

After the above message appears, the MP-2 will be in Play mode.

- Pressing the "**v**" button to answer "No" to the abandon message will return you to the store message.

NOTE: It may helpful to refer to the signal flow diagram at the front of the manual to understand the position of the following functions.

Tube Voicing

Selects basic character of tube sound by configuring the four tube stages and biasing them for the proper gain and interstage EQ. There are ten Voicings available:

Table 1: Tube Voicings

1	Crystal Clean
2	Spanky Clean
3	Fat Clean
4	Vintage Brown
5	Warm Vintage
6	Dynamic Vintage
7	Warm Hi Gain
8	Dynamic Hi Gain
9	Ultimate Hi Gain
10	Fat Hi Gain

Drive & Master Level

Controls amount of signal fed to tube preamp. Use Master Level to balance relative levels of different User programs.

Drive (0/100):	Determines the amount of gain in the tube preamp.
Master (0/100):	Sets output level from tube preamp into other sections.
OD [Overdrive] (0/100):	<u>Available only when Hi Gain tube Voicings (7-10, see above) are selected.</u> Determines how extreme distortion generated in the preamp is.

Compressor

The **Compressor** is the first stage a signal reaches from the input jack, preceding the tube preamp.

- Status (In/Out):** Switches **Compressor** in and out of the signal path.
- Ratio (1.5:1/30:1):** Sets compression ratio (increase in output for a given increase in input). Available values are: 1.5:1, 2:1, 3:1, 4:1, 6:1, 8:1, 10:1, 15:1, and 30:1.
The higher the compression ratio, the more "squeeze" (gain reduction) is applied to the signal.
- Threshold (0/100):** Found on screen 2. The **Compressor** reduces gain (squeezes) signals exceeding the **Threshold** value, and increases gain (amplifies) signals below the **Threshold**. The **COMP THRESH** LED will light whenever the signal exceeds the **Threshold** and **Compressor Status** is set to "In".
- Gain (0/100):** Found on screen 2. Sets the amount of gain applied to the compressor output to make up for level lost as a by-product of compression. Lower **Thresholds** and higher **Ratios** will generally necessitate higher **Gain** settings. It is recommended that **Gain** be adjusted until the basic signal level does not appear to change when the **Compressor** is switched in and out.

Tone Controls

The **Tone** controls give fast access to tonal shaping. Use the **Tone** controls to get a basic tonal sound and the **Graphic EQ** for more specific shaping needs. The actual frequencies affected by the **Tone** controls sometimes change with different tube **Voicings** to give the best sound.

*NOTE: Simultaneously pressing the "▲" and "▼" buttons resets the **Tone Controls** to flat response (all bands to 0 dB).*

- Lo (+12/-12):** Shapes the amount of low (bass) frequencies in the signal in 2 dB steps.

Mid (-12/12):

Shapes the amount of midrange frequencies in the signal in 2 dB steps.

Hi (+12/-12):

Shapes the amount of hi (treble) frequencies in the signal in 2 dB steps.

Presence (+12/-12):

Shapes the amount of presence (upper mid) range frequencies in the signal in 2 dB steps.

Graphic EQ

Graphic EQ provides fine tonal shaping by allowing adjustment of nine specific frequencies. Up to 12 dB of boost or cut can be applied in two dB steps at any of the frequencies. The display gives a graphic indication of the frequency currently selected and the complete EQ curve. The upper right corner of the display always shows the frequency currently being edited, with the amount of boost or cut at that frequency shown directly below it.

*NOTE: Simultaneously pressing the "▲" and "▼" buttons resets the **Graphic EQ** to flat response (all bands to 0 dB).*

The frequencies are:

Table 2: EQ Frequency Centers

100 Hz	170 Hz	280 Hz	470 Hz	800 Hz
1.3 kHz	2.2 kHz	3.8 kHz	6.3 kHz	

Wah Filter

The **Wah Filter** follows the **Compressor** and precedes the tube stages. It can be swept by using a MIDI controller, with a sweep triggered by playing dynamics, or with an onboard sweep oscillator (LFO).

Status (In/Out):

Switches **Wah Filter** in and out of the signal path.

Mode (Pedal):

Enables **Wah Filter** to be swept by a MIDI controller. A MIDI controller must be assigned in the Real-Time MIDI section to control **Wah Pedal** in order for this function to work. For more information see the description of **Real-Time MIDI** below.

Wah Pedal (0/100):

Found on screen 2 when **Pedal Mode** is selected. Sets the frequency in the filter at which the pedal's sweep begins.


(Triggered):	Causes Wah Filter to be activated according to input signal level.
Sensitivity (0/100):	Found on screen 2, available only when Triggered Mode is selected. Sets the sensitivity of the trigger mechanism.
Delay (0/100):	Found on screen 2, available only when Triggered Mode is selected. Slows down the triggered sweep action.
Start Point (0/100):	Found on screen 3 when Triggered Mode is selected. Sets the frequency in the filter at which the triggered sweep begins.
(Auto):	Causes Wah Filter to be swept by the onboard sweep oscillator.
Depth (0%-100%):	Found on screen 2, available only when Auto Mode is selected. Sets the range of the sweep (how much the frequency moves).
Rate (0 Hz-10 Hz):	Found on screen 2, available only when Auto Mode is selected. Adjusts the rate of the sweep in 1/10 Hz steps.
End Point (0-100):	Found on screen 3, available only when Auto Mode is selected. Sets the frequency in the filter at which the sweep ends.
Waveform (Sin/Tri):	Found on screen 3, available only when Auto Mode is selected. Selects either a sine or triangle shape for the sweep. (See illustration of LFO waveshapes on next page.)

Tremolo

Tremolo is a pulsating volume effect controlled by an onboard sweep oscillator.

Status (In/Out):	Switches Tremolo in and out of the signal path.
Waveform (Sin/Tri/Surf):	Selects a sine, triangle, or "surf" shape for the LFO that modulates the signal to create the tremolo effect. (See illustration of LFO waveshapes on next page.)

LFO Waveshapes

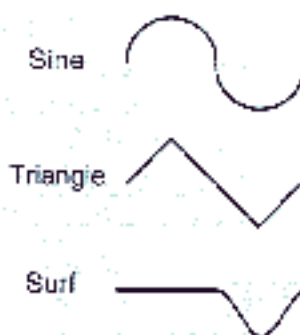

Depth (0%-100%):	Found on screen 2. Sets the intensity of the tremolo effect.
Rate (0 Hz-10 Hz):	Found on screen 2. Adjusts the rate of the tremolo effect in 1/10 Hz steps.

Noise Reduction

Some amount of noise is unavoidable in guitar preamplification, especially when applying high gain, but it is usually only noticeable when nothing is being played. The **Noise Reduction** section offers tools to eliminate noise when there is no signal. The **Fader** mode fades sound slowly when the signal falls below the **Threshold**, while the **Gate** mode turns the signal off instantly and completely. In general, **Fader** mode is recommended for lower gain programs, and **Gate** mode for high gain programs.

Status (In/Out):	Switches Noise Reduction in and out of the signal path.
Mode (Fader/Gate):	Selects the Noise Reduction operating mode.
Threshold (0-100):	Found on screen 2. Signals exceeding the Threshold are heard unaltered, while signals below the Threshold are faded or gated to silence.

Stereo Chorus

The **Stereo Chorus** is the point at which the input signal becomes stereo.

- Status (In/Out): Switches the **Stereo Chorus** in and out of the signal path.
- Depth (0%-100%): Found on screen 2. Sets the intensity of the **Chorus** effect.
- Rate (0 Hz-10 Hz): Found on screen 2. Adjusts the rate of the **Chorus** effect in 1/10 Hz steps.

Stereo Effects Loop

Following the **Chorus**, each channel of the signal feeds its own effects loop, the left channel being loop A and the right channel loop B. The loops are in a send/return configuration and both the Sends and Returns are only active when Effects Loop Status is set to In.

- Status (In/Out): Switches the **Effects Loop** Sends and Returns in and out of the signal path.
- Mix A (0-100%): Found on screen 2, active only when Status is set to "In." Adjusts the mix of "wet" signal from **Effects Loop** Return A with "dry" (original) signal. The higher the percentage, the more effects will be heard.
- Mix B (0-100%): Found on screen 2, active only when Status is set to "In." Adjusts the mix of "wet" signal from **Effects Loop** Return B with "dry" (original) signal. The higher the percentage, the more effects will be heard.

NOTE: Even when **Effects Loop Status** is set to "In", the **Effects Loop Sends** can be disabled through **MIDI** if **EX Send Mute** is selected in the **Real-Time MIDI** section as a parameter to be controlled. If you are unable to get signal from the **Effects Sends** when Status is set to "In", check **Real-Time MIDI** for this parameter.

Program Title

This is where the user can create his/her own name for a program before storing it. Upper and lowercase letters, numbers 1 through 0, and various symbols are available for naming. A name can have up to 16 characters or spaces.

The "<" and ">" buttons move the cursor from character to character, while the "^" and "v" buttons select the letter, number or symbol. The blank space character can be found between the "?" and "A" characters.

NOTE: Simultaneously pressing the "^" and "v" buttons clears the **Program Title** (all characters blank).

The name is kept as long as the MP-2 is in Program Edit mode, but is not permanent until the program is stored.

Real-Time MIDI (RTM)

In this section, MIDI continuous controller messages received by the MP-2 can be assigned to control parameters in real time. Up to sixteen assignments (also called "mappings") can be made; each assignment is called a "slot." A single controller can be mapped to control a number of different parameters, but each parameter can only be mapped to one controller. For this reason, once a parameter has been mapped to a controller, it disappears from the **picklist** of parameters which can be controlled. On the next page is the complete picklist.

Table 3: RTM Parameter Picklist

Unassigned	Graphic: Band 5	Wah Start Point
Drive	Graphic: Band 6	Wah Delay
OD (Overdrive)	Graphic: Band 7	Wah Depth
Master	Graphic: Band 8	Wah Rate
Comp. (Compressor) Status	Graphic: Band 9	Wah End Point
Tone: Lo	N-R (Noise Reduction) Status	Chorus Status
Tone: Mid	Gate Threshold	Chorus Depth
Tone: Hi	Facer Threshold	Chorus Rate
Tone: Pres (Presence)	Tremolo Status	Loop A Mix
Graphic: Band 1	Tremolo Depth	Loop B Mix
Graphic: Band 2	Tremolo Rate	FX Send Mute
Graphic: Band 3	Wah Pedal	
Graphic: Band 4	Wah Sensitivity	

Real-Time MIDI (RTM) is edited in this section using either of two modes, Quick or Expert, and used in Play mode. (Which edit mode is used has no effect on RTM operation in Play mode.) In Quick mode, assignment of MIDI controllers to MP-2 parameters is simplified to make the process as fast and easy as possible, allowing only the parameter being controlled to be viewed. Expert mode involves a few extra steps which allow direct selection and viewing of slot number, controller number, controller sense and minimum and maximum parameter values.

The **Real-Time MIDI Preview** feature enables the effect of RTM assignments to be auditioned without leaving the RTM section or Program Edit mode.

NOTE: Be sure a MIDI controller is properly connected to and set up to communicate with the MP-2 before attempting to work with RTM.

RTM Edit Mode (Quick/Expert): Sets edit level for programming RTM.

Macros

In Quick mode, eight additional entries appear in the parameter picklist for continuous controllers. These are **macros**, factory-programmed groups of parameters that are all changed simultaneously by the controller assigned to that slot. Macros do use up multiple slots. Here is a list of macros and descriptions:

Table 4: Macro Descriptions

V-CURVE	Goes from mid-rangy EQ to extreme V-shaped curve with only a slight level change.
GRIND	Goes from barely distorted (pedal back) to heavy grind (pedal forward). Tweaked for use with high gain voices.
STEREO FX MIX	Controls both A and B Effects Loop Mixes at the same time.
SUSTAINER	Great for going from rhythm to lead, but continuously variable. Brings in more gain, fat mids, and overall volume, while taking out the noise gate for infinite sustain with no gate "chatter". Designed for high-gain voices.
MELLOW WAH	A Pedal Wah that doesn't sound harsh or take your head off when using Stratocasters or other bright guitars. The program must have Wah Filter Status set to "In" and be in Pedal mode.
AUTO-WAH/ TREM	Crossfades between two different automatic effects. Cocking the pedal forward gets you AUTO-WAH, and bringing it back gradually makes it TREMOLO. The program must have Tremolo Status set to "On", Tremolo Waveform set to "Surf", Wah Filter Status set to "On", and Wah Mode set to "Auto".
T-WAH DEPTH	The more forward the pedal is pushed, the more prominent the Triggered Wah effect, but when the pedal is moved back it doesn't become muffled because the Wah Start Point moves up.

Table 4: Macro Descriptions

MODULATION An organ modulation sound. **Tremolo Status** and **Chorus Status** must both be set to "On" in the program.

Macros may be examined and altered in Expert mode, and the resulting, altered RTM assignments may be stored, but user-altered-or-created assignments are not stored as Macros, that is, they cannot be titled and do not appear in the picklist.

To examine the components of a Macro:

- Set RTM Edit Mode to "Expert".
- Use the Slot parameter to view the parameter assigned to any slot.
- Move the cursor to the Parameter setting. The display will briefly show the message, "THIS SLOT IS PART OF A MACRO" if it is a component of the macro. After the message disappears, the MP-2 will allow editing of the setting as usual.
- Repeat steps 2 and 3 for each slot.

Real-Time MIDI Preview

This feature, available in Quick and Expert modes, lets you evaluate the effect of an RTM assignment without leaving the RTM section. This is not only simplifies auditioning, but also means it is not necessary to store the program before hearing the effect of the assignment. Here are a few notes about **RTM Preview**:

- 1) To activate the MIDI controller's link to a parameter, the controller must be moved past the position that corresponds to the current value of the parameter. Moving the controller past this point "captures" the parameter. When there are multiple parameters assigned to a single controller, the controller will usually need to be "swept", or moved through its entire range, to capture all parameters. (This is also true when using RTM in Play mode.)

The exceptions to this are the two Global audio parameters, **Stereo Volume Controller**, and **Tuner Mute**, which do not need to be captured. These are located in System Edit.

- 2) The **Compare** function operates in RTM Preview. "INITIAL SETTINGS" resets the parameter in question to the stored value. The controller will need to be swept to hear the difference in the effect.

Making RTM Assignments in Quick Mode

Parameter: Found on screen 2. Selects the parameter for real-time control. The parameter name will be shown on the bottom line of the display. See above for the list of parameters which can be controlled.

Real Time MIDI Preview: Found on screen 3; active only when Parameter is not "Unassigned". Allows operation of an RTM assignment to be checked without having to leave Program Edit mode and store the program by moving controller and listening to the result.

General procedure for making RTM Assignments in Quick mode:

This is an abbreviated version of the procedure given in the Tutorial, reproduced here for convenience.

- Press the **REAL-TIME MIDI** button to enter the section if it is not already selected.
- Set the RTM Edit Mode to "Quick".
- Press the ">" button to step to the next screen.

▣ MOVE PEDAL OR
PRESS SWITCH

- Move the MIDI controller slightly. The MP-2 will detect the MIDI controller number and whether it is a switch-type or continuous controller, then assign it to the slot.

The display will then show the parameter, if any, currently assigned to that controller.

▣ PARAMETER→
UNASSIGNED

- Choose the parameter you wish to control from the picklist of available choices.

Notice that only toggle parameters are available when a switch-type controller is detected, and only variable parameters are available when a continuous controller is detected.

- Press the ">" arrow once to step to the next screen, which is the RTM Preview function.

REAL TIME MIDI PREVIEW

- Operate the controller and check that the effect is satisfactory.
- Press the "<" button when you are finished previewing and the display will return to the "Move Pedal or Press Switch" message. You are ready to assign your next controller.

Making RTM Assignments in Expert Mode

NOTE: Real-Time MIDI control of parameters does not function in Program Edit mode, except in Real-Time MIDI Preview. Also, remote parameter editing through MIDI is limited to the Sense and Range parameters when the Real-Time MIDI section is active.

- Slot (1-16): Found on screen 2. Chooses one of the sixteen slots for editing. The slot number is simply a designation which makes no functional difference.
- Parameter: Found on screen 2. Selects the parameter for real-time control. The parameter name will be shown on the bottom line of the display. See above for the list of parameters which can be controlled.
- Controller# (0-127): Found on screen 3; active only when Parameter is not "Unassigned". Selects the MIDI controller number that will affect the selected parameter. The controller number can be selected using the ^ and v buttons or by operating the controller while it is connected to the MP-2 and this parameter is selected. When the controller is operated, its number will appear in the parameter value.

NOTE: If the controller is operated and its number does not appear in the Controller # parameter value check MIDI connections and verify that the controller and the MP-2 are set to the same channel. The MIDI Monitor function found on of the Reference chapter is very helpful for this type of troubleshooting.

Sense (Forward/Reverse): Found on screen 3; active only when Parameter is not "Unassigned" and controller is continuous (not switch). When set to Forward, the selected parameter increases in value when the incoming MIDI controller values increase (pedal is pushed down), and decrease as the controller values decrease (pedal is pulled back). When set to Reverse, the parameter value decreases when the controller value increases (pedal is pushed down), and increases as the controller values decrease (pedal is pulled back).

Minimum Value: Found on screen 4; active only when Parameter is not "Unassigned" and controller is continuous (not switch). Sets the value of the selected parameter when the controller is at its minimum value.

Maximum Value: Found on screen 4; active only when Parameter is not "Unassigned" and controller is continuous (not switch). Sets the value of the selected parameter when the controller is at its maximum value.

Real Time MIDI Preview: Found on screen 5; active only when Parameter is not "Unassigned". Allows operation of RTM assignment to be checked by moving controller and listening to the result.

NOTES on Real-Time MIDI:

1) The range and units of the Minimum or Maximum value will depend on the parameter. For example, when Drive is the selected parameter, Minimum can vary from 0 to 100, but when Graphic EQ Band 1 (100 Hz) is selected, the minimum can vary from -12 dB to -12 dB.

2; When *Sense* is set to "Reverse", the relationship between controller value and parameter value is inverted, that is, the lowest controller value (pedal pulled all the way back) will set the parameter to **Maximum**, and the highest controller value (pedal pushed all the way down) will set the parameter to **Minimum**.

3; The *Min* and *Max* values can never exceed the existing value of the parameter. If, for example, the *Drive* parameter is set to 30, any attempt to set *Min* higher or *Max* lower than 30 will result in the error message, "MIN. (or MAX) IS NOW EQUAL TO PARAM. VALUE."

4; *Min*, *Max*, and *Sense* are not available for *Status* parameters, as these are switches with only two values (*In* and *Out*).

General procedure for making RTM assignments in Expert Mode:

- Press the REAL-TIME MIDI button to enter the section if it is not already selected.
- Set RTM Edit Mode to "Expert".

```
SELECT RTM EDIT
MODE→EXPERT
```

- Select Slot to be programmed.

```
SLOT→1 PARAM:
TREMOLO STATUS
```

- Select Parameter to be controlled.

```
SLOT:1 PARAM→
DRIVE
```

- Select MIDI Controller number.
- Set the controller Sense.

```
CONTROLLER#→65
SENSE:FORWARD
```

- Set the Minimum and Maximum allowable values for the parameter under control.

```
MIN→0
MAX:100
```

- Check the operation of the mapping in Real-Time MIDI Preview.

NOTE: Simultaneously pressing the "v" and "v" buttons clears all Slots (unassigns all parameters).

Compare

This feature allows comparison, without leaving Program Edit mode, between an edited (Modified) version of a program and the stored version (Original). Each time the Compare button is pressed, the MP-2 switches between the versions, allowing each to be heard. The display indicates whether it is switching to the edited version ("MODIFIED SETTINGS") or the stored version ("INITIAL SETTINGS").

System Edit Mode


Utility functions and MIDI parameters which are global (in effect for all programs) are found in System Edit mode. Many functions in this mode have procedures of several steps which are entered with the up arrow.

MIDI Function Menu

The MP-2's basic MIDI functions, as well as some of its most advanced ones, are accessed through the MIDI function menu. Unlike the other selections in the System Edit mode, the MIDI Function menu is not a single function, but a submenu of a number of functions.

The MP-2 can send and receive the following kinds of MIDI messages: Program Change (which can also be remapped), Continuous Controller (used for both Global and RTM functions), and System Exclusive (which can contain the settings for a single program or all User programs).

MIDI Function Menu

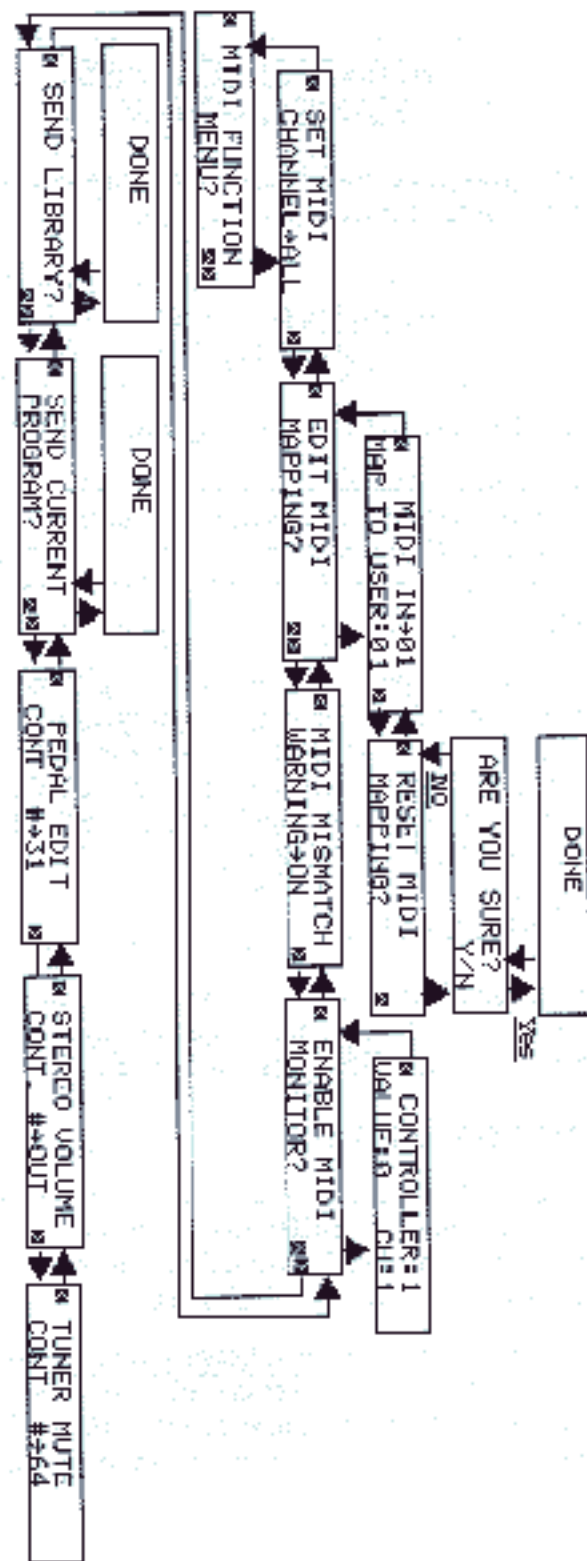

To access the MIDI Function menu:

- Press the "▲" button when the display shows the message "MIDI FUNCTION MENU?"

To move through the MIDI Function menu:

- Press the ">" button from any main menu entry to step to the next entry.

Many entries have additional screens. It is usually necessary to use the "<" button to "back out" of these screens and return to the main menu.

To exit the MIDI Function menu:

- Press the "<" until the display again shows the message "MIDI FUNCTION MENU?"

About Global MIDI Parameters

Global parameters are settings that apply no matter what program is running. The MIDI channel and program map, for example, do not change when the program is changed, nor do the Pedal Edit Controller, Stereo Volume Controller, or Tuner Mute.

This is most important to know for the last two. The fact that the Stereo Volume Controller is Global, means that it can be set to achieve a good basic level that blends with the band, which is **maintained** when a new program is recalled. Likewise, if you step on a program change footswitch while the Tuner Mute is engaged, the outputs will **stay muted** when the new program is recalled.

Set MIDI Channel

This parameter sets the MIDI channel over which the MP-2 will transmit and receive. It can be set to any of the 16 MIDI channels, ALL (for Omni mode (responds to MIDI information arriving on any channel), or OFF to disable MIDI reception.

NOTE: When the MP-2's MIDI Channel is set to "All" or "Off", program changes are transmitted on channel 1.

Edit MIDI Mapping

The MP-2 can map (assign) each incoming MIDI program change number to recall any User program. A single User program may be mapped to many MIDI program change numbers.

NOTE: Preset programs cannot be recalled through MIDI, only from the front panel.

To create a MIDI Program Change map:

- Press the "**^**" button when the display shows the message "EDIT MIDI MAPPING?" to access the map.
- Use the "**^**" and "**v**" buttons to select the MIDI program change number you wish to map.
- Press the "**>**" button to move the cursor to the User program value.
- Use the "**^**" and "**v**" buttons to select the User program you want recalled when the selected MIDI program change number is received.
- Press the "**<**" button to move the cursor back up to the MIDI program change value and repeat steps 2-5 as many times as necessary until program changes have been mapped as desired.

It is not necessary to map every program change; the default mapping will call the User program with the same number as the MIDI program change.

- When mapping is complete, press the "**<**" button to return to the MIDI Function menu.

To restore the default map (1 to 1 mapping, User program # = MIDI program #):

- Press the "**>**" button while in the mapping screen until the display shows the message "RESET MIDI MAPPING?"
- Press the "**^**" button to continue. The display will ask for confirmation.
- Press the "**^**" button to restore the default map.

To abandon restoring the default map:

- When the display asks for confirmation, press the down arrow. The display will return to the Reset screen.
- Press the left arrow to exit the Reset function and return to the mapping screen.

MIDI Mismatch Warning (On/Off)

The most common cause of MIDI problems is having the MIDI controller and the MIDI "slave" device (in this case, the MP-2) not set to the same channel. When MIDI Mismatch Warning is set to "On," the MP-2 will warn you if it receives MIDI messages on a channel other than the one to which it is set.

- | | |
|------|--|
| On: | The MP-2 will display the messages, "MIDI CHANNEL MISMATCH," "CHECK MIDI SETTINGS" if it receives MIDI messages on a different channel than its own. |
| Off: | No warning messages are given. |

Enable MIDI Monitor

When troubleshooting MIDI problems it is often helpful to be able to see what MIDI messages the MP-2 is receiving. This ability can also be useful simply to see what kinds of messages another MIDI device is transmitting. The MIDI monitor displays, in real time, all MIDI controller and program change messages being received by the MP-2.

To enable MIDI monitoring:

- Press the "**^**" button when the display shows the "ENABLE MIDI MONITOR?" message.

To exit MIDI monitoring:

- Press the "**<**" button to return to the MIDI Function menu.

Send Library

The MP-2 can transmit or receive all User programs over MIDI (as System Exclusive messages) to a librarian or sequencer program or another MP-2.

To send all User programs over MIDI:

- Connect MIDI Out of the MP-2 to MIDI In of another MP-2 or a MIDI interface hooked up to a computer running a librarian or sequencer program.
- Press the "**^**" button when the display shows the "SEND LIBRARY?" message. The display will verify that the operation has been completed.

NOTE: In order to receive a program or other System Exclusive messages, the MP-2 must be in Play mode with Memory Protect "OFF."

Send Current Program

The MP-2 can transmit the contents of the program currently being edited over MIDI (as System Exclusive messages) to a librarian or sequencer program, or receive a program from another MP-2.

To send the current program over MIDI:

- Connect MIDI Out of the MP-2 to MIDI In of another MP-2 or a MIDI interface hooked up to a computer running a librarian or sequencer program.
- Press the " \wedge " button when the display shows the "SEND CURRENT PROGRAM?" message. The display will verify that the operation has been completed.

NOTE: In order to receive a program or other System Exclusive messages, the MP-2 must be in Play mode Memory Protect "OFF."

Pedal Edit Controller

One of the MP-2's most powerful MIDI features is the ability to edit parameters remotely from a MIDI controller. The designated controller will vary the value of the currently selected parameter in Program Edit mode, making possible hands-free parameter editing. This should not be confused with real-time MIDI operation, which does not alter the value in the MP-2's working memory and is only active in Play mode.

The controller number can be selected using the \wedge and \vee buttons or by operating the controller while it is connected to the MP-2 and this parameter is selected. When the controller is operated, its number will appear in the parameter value.

NOTES:

1) If the controller is operated and its number does not appear in the Controller # parameter value check MIDI connections and verify that the controller and the MP-2 are set to the same channel. The MIDI Monitor function is very helpful for this type of troubleshooting.

2) The Pedal Edit Controller function is limited to the pedal SENSE and RANGE parameters in the Real-Time MIDI section.

Stereo Volume Controller

In addition to any volume parameters under control of RTM, the MP-2 offers Global control of stereo volume through MIDI. This volume control follows everything else in the signal path except the front panel Output Level pot.

The controller number can be selected using the " \wedge " and " \vee " buttons or by operating the controller while it is connected to the MP-2 and this parameter is selected. When the controller is operated, the number will appear in the parameter value. When set to "Out", no MIDI volume control is enabled (unless in Real-Time MIDI).

NOTE: If the controller is operated and its number does not appear in the Controller # parameter value check MIDI connections and verify that the controller and the MP-2 are set to the same channel. The MIDI Monitor function is very helpful for this type of troubleshooting.

Tuner Mute Control

It is often necessary to tune while in play, however, it is not desirable for the audience to always hear that process. The Tuner Mute, when activated by a selected MIDI controller, shuts off audio to all of the MP-2's outputs, allowing a tuner connected between the instrument and the MP-2 to be used silently. It is a Global parameter which remains in effect regardless of the program running.

The controller number can be selected using the " \wedge " and " \vee " buttons or by operating the controller while it is connected to the MP-2 and this parameter is selected. When the controller is operated, the number will appear in the parameter value. When set to "Out", no mute control is enabled. It is recommended that one of the MIDI switch controllers be used for this purpose, such as CC 64 (Sustain Pedal).

NOTE: If the controller is operated and its number does not appear in the Controller # parameter value check MIDI connections and verify that the controller and the MP-2 are set to the same channel. The MIDI Monitor function is very helpful for this type of troubleshooting.

Copy Presets to User

The factory Preset programs can be reloaded into User programs at any time.

To reload Preset programs:

- Press the "**^**" button when the display shows the message "LOAD PRESET PROGRAMS?" The display will ask for confirmation.
- Press the "**^**" button to reload the Preset programs or the down arrow to abandon the reload.

WARNING! Loading the Preset programs will erase the contents of User memories 1-39.

Copy Single Programs

Programs may be copied from any location, Preset or User, into any User program.

To copy a program:

- Press the "**^**" button to access the second screen.
- Use the **BANK UP**, **BANK DOWN**, and number (0-9) buttons to select the source location. The Bank buttons will step first through all User banks, then through the Preset banks.
- Use the right arrow to move the cursor to the destination (TO:) parameter.
- Use the **BANK UP**, **BANK DOWN**, and number (0-9) buttons to select the destination User location. Programs can only be stored in User memories.
- Press the up arrow when the source and destination memories have been selected. The display will ask for confirmation.
- Press the up arrow to complete the copy. The display will show the message, "DONE!" to verify that the procedure is complete.

To abandon a copy procedure:

- When the confirmation message appears, press the down arrow to abandon the copy. The display will return to the selection screen.

- Press the left arrow to exit the copy function or select new source and destination values and continue with the copy.

Swap Programs

Programs may be swapped between any two User memories.

To swap a program:

- Press the up arrow to access the second screen.
- Use the **BANK UP**, **BANK DOWN**, and number (0-9) buttons to select the source (SWAP:) location.
- Use the right arrow to move the cursor to the destination (WITH:) parameter.
- Use the **BANK UP**, **BANK DOWN**, and number (0-9) buttons to select the destination location.
- Press the up arrow when the source and destination memories have been selected. The display will ask for confirmation.
- Press the up arrow to complete the swap. The display will show the message, "DONE!" to verify that the procedure is complete.

To abandon a swap procedure:

- When the confirmation message appears, press the down arrow to abandon the copy. The display will return to the selection screen.
- Press the left arrow to exit the swap function or select new source and destination values and continue with the swap.

Panel Mode

Panel Mode offers the ability to make the MP-2's front panel act like a MIDI controller when recalling programs. This is useful if you are accustomed to using a MIDI controller and are more familiar with the MIDI program change numbers associated with a program than with the MP-2 User program number or if your MIDI program change footswitch fails onstage. (In that situation, you would simply move the cable plugged into MIDI Thru to MIDI Out and use the front panel to send program changes to the rest of your MIDI gear.)

Local: Normal operation.

Controller:

Front panel program selection in Play mode uses the MIDI Program Change Map; in other words, the front panel buttons act like a MIDI controller when recalling programs, including transmitting the number entered from the front panel as a MIDI Program Change message.

When this mode is selected, the display in Play mode will show the MIDI program change number and the User program to which it is mapped, but the map is not editable from this screen. Editing of the map can only be done in the MIDI Function menu.

Restore System Defaults

The default values for the System parameters listed here can be restored at any time:

Table 5: System Default Values

MEMORY PROTECT	Off
PANEL MODE	Local
SET MIDI CHANNEL	All (Omni)
MIDI MISMATCH WARNING	On
PEDAL EDIT CONTROLLER	#31
STEREO VOLUME CONTROLLER	#Out (None)
TUNER MUTE CONTROLLER	#64

Restoring the System defaults also resets (unmutes) the **Tuner Mute**, and resets the **Stereo Volume** to full on (100%).

To restore factory System default values:

- Press the up arrow when the display shows the "RESTORE SYSTEM DEFAULTS?" message. The display will verify that the operation has been completed.

Memory Protect

The memory protect function, when engaged, disables the ability to accept SYSEX messages, and to store edited programs.

- Off: Normal operation; edited programs may be stored into User memories.
- On: Store function and SYSEX load capability disabled.

Specifications

Inputs (Front and Rear)

Connectors:	Unbalanced (TS) 1/4" phone. Front panel jack overrides rear panel jack.
Maximum Input Level:	+12.2 dBV (3.4V RMS)
Input Impedance:	390 kilohms

Stage Outputs

Connectors:	Unbalanced (TS) 1/4" phone
Maximum Output Level:	+11.1 dBV (3.6V RMS) into 600 ohms +17.1 dBV (7.2V RMS) into 50 kilohms
Output Impedance:	500 ohms

Recording Outputs

Frequency Response:	Bandwidth limited to approximately 50 Hz-3 kHz
Connectors:	Balanced 3-pin XLR (pin 3 hot) Unbalanced (TS) 1/4" phone
Maximum Output Level:	
Unbalanced:	+11.1 dBV (3.6V RMS) into 600 ohms +17.1 dBV (7.2V RMS) into 50 kilohms
Balanced (Line):	+12 dBV (4V RMS) into 600 ohms
Balanced (Mic):	-16 dBV (.15V RMS) into 200 ohms
Output Impedance:	500 ohms

Effects Loops Sends

Connectors:	Unbalanced (TS) 1/4" phone
Maximum Output Level:	
Line:	+11.1 dBV (3.6V RMS) into 600 ohms +17.1 dBV (7.2V RMS) into 50 kilohms
Instrument:	-8.9 dBV (.36V RMS) into 600 ohms -2.9 dBV (.72V RMS) into 50 kilohms

Effects Loop Returns

Connectors:	Unbalanced (TS) 1/4" phone
Maximum Input Level:	
Line:	+20 dBV (10V RMS)
Instrument:	0 dBV (1V RMS)
Input Impedance:	10 kilohms
Power Consumption:	35 watts
Size:	1.75" H x 19" W x 9.5" D
Weight:	7 lbs.

Function		Transmitted	Received	Remarks
Basic Channel	Default	1	ALL (Omni)	Transmits on channel 1 when set to "ALL" or "OFF"
	Changed	1-16	OFF, ALL, 1-16	
Mode	Messages	X	X	
	Default	X	X	
	Altered	X	X	
Note Number	True Voice	X	X	
Velocity	Note ON	X	X	
	Note OFF	X	X	
After Touch	Key's	X	X	
	Ch's	X	X	
Pitch Bender		X	X	
Control Change		X	0-127	Can be arbitrarily mapped to internal parameters. Up to 16 assignments can be made per program, plus two global assignments.
Prog Change	True #	0-127	0-127	Displayed as 1-128. Can be arbitrarily mapped to User programs.
System Exclusive		○	○	Can send or receive parameter data for a single program or a library of programs.
System Common	Song Pos	X	X	
	Song Sel	X	X	
	Tune	X	X	
System Real Time	Clock	X	X	
	Commands	X	X	
Aux Messages	Local ON/OFF	X	X	
	All Notes Off	X	X	
	Active Sense	X	X	
	Reset	X	X	

○ Yes

X No

MIDI and the MP-2

A brief discussion of the MIDI specification and the portions of it used by the MP-2.

MIDI (Musical Instrument Digital Interface) is the means by which computer-based electronic musical instruments, such as synthesizers and samplers, and other related equipment can exchange information. MIDI is a specification agreed upon by the manufacturers of this equipment, and consists mostly of the definition of a number of software messages that, taken collectively, comprise something that is part communications protocol, part computer language, part file format. Technically, it is a one-way serial interface operating at a speed of 31.25 kilobaud. (Two-way MIDI communication is possible, it just entails using two cables between the devices.)

MIDI messages convey information about a musical performance, though they do not actually carry sound. Think of the modern equivalent of a player piano: the holes are MIDI note messages (which specify which note was played and how hard), while the player piano actually producing the sound is a synthesizer or sampler. A **sequencer** is a recorder of MIDI data, like a tape recorder, except that it doesn't use tape and it records MIDI data, not sound. In other words, the sequencer is what takes an actual performance and makes a MIDI "piano roll."

In order to allow multiple devices to be simultaneously but independently addressed, MIDI uses a **channel** system similar in concept to television. When a device is set to one of the 16 MIDI channels, it will respond only to messages carrying that channel number.

Note messages are the most commonly used, but the MP-2 has no need of these. The next most common messages are **program change messages**. These tell the receiving device to recall a specific program, or collection of settings, from its memory. When the MP-2 receives a program change message, it recalls one of the User programs; it is also capable of transmitting a program change message when a program is selected from the front panel. MIDI is capable of specifying up to 128 different program change numbers. The MP-2's **MIDI Mapping** feature lets you assign each MIDI program change number to call up any User program you desire.

The MP-2's **Panel Mode** is a special feature that allows the MP-2's front panel to act as if it were a MIDI controller plugged into MIDI In. In this case, you press the MIDI program number on the front panel, and the MP-2 recalls the current User program currently mapped to that MIDI number. It will also show that mapping.

Many MIDI systems consist of a number of components. In order to achieve the maximum flexibility with the least effort, it was necessary to devise a system wherein a single program change message from a source could call up desired programs in all the components simultaneously, without having to constantly shuffle programs around in memory to match a program change number. This is the purpose of the MP-2's program change mapping capability.

Another common type of MIDI message is **Continuous Control** messages. These are generally used to gestural controllers like Modulation Wheel and Volume. Interestingly, switch-type controllers, like Sustain Pedal, are also in this category, even though they are not actually continuous. The MIDI specification originally defined 124 different controllers, but later enhancements to the spec allow many more to be defined. A few very important controllers, notably **pitchbend** and **aftertouch**, have their own messages defined and are not considered part of the Continuous Controller class. The MP-2 can use Continuous Controller messages to control virtually any of the parameters available in Program Edit mode, but it does not recognize pitchbend or aftertouch.

The last type of MIDI message used by the MP-2 is **System Exclusive**. This type of message was originally intended as a "trap door" to allow both expansion of the MIDI spec and use by manufacturers of features unique to their devices. The definition of the basic System Exclusive is quite sparse and open-ended to give manufacturers the greatest latitude. Each manufacturer uses their own format for these messages, and only their devices or computer software specifically designed to work with those devices will recognize them. There have been several more structured additions to the MIDI spec that are defined as types of System Exclusive messages, but it is the original use that the MP-2 employs. It is the MP-2's System Exclusive implementation that lets libraries or programs be sent and received by the MP-2. Computer software programs called **librarians** store and retrieve this kind of information.

There are numerous other types of MIDI messages that are not covered in this extremely brief discussion because they are not appropriate to the job the MP-2 performs. For more information on MIDI, there are several magazines that focus heavily on MIDI and its applications, and a number of fine books on the subject.

Troubleshooting

Some hints to aid in correcting problems.

Problems happen, always at a critical moment when they can least be afforded. Fortunately, the overwhelming majority of problems are simple in nature and usually involve no more than finding and correcting some oversight.

Troubleshooting Tips

The difference between quickly fixing a problem and becoming angry and frustrated lies mostly in the approach taken in troubleshooting. Here are a few rules that can be applied to any troubleshooting situation:

1) Stay calm!

It is easy to become upset when a problem crops up, especially in a high-pressure situation such as in the "heat of the battle" onstage, but panic tends to close the mind, making it more likely that the fault will be overlooked. It may take a lot of effort to remain calm, but this is the single most important troubleshooting technique.

2) Be methodical. Use the process of elimination to isolate the cause.

Time is frequently wasted in troubleshooting situations by attacking the problem randomly. The most potent technique for finding the cause of a problem is the process of elimination. The first thing to try is eliminating everything in the middle of a signal chain and see if the problem still exists. Use any indicators or meters in the signal chain to help isolate where the signal exists and where it does not.

If you are getting no sound from the MP-2, for example, try setting all Status parameters to "Out" and disabling the Stereo Volume Control. If there is still no sound, the problem is either elsewhere or a truly serious one that cannot be dealt with on the spot (which does happen on occasion). If the problem disappears, you have isolated the cause as being something to do with the sections you removed. The next step is to add them back in one at a time, testing as you add each stage. In this way, you will quickly identify the culprit, allowing you to then focus on that area in the same way and find the

specific cause.

This may sound like a procedure too time-consuming for a performance situation, but, in fact, it can be done very quickly once the process is familiar, and it offers the best chance of actually finding and correcting the problem.

3) Don't overlook the obvious. Check simple mechanical things first.

When a problem occurs, don't immediately assume it is a complex MIDI mishap or some other arcane thing; most often it is the simplest possible explanation that is the right one. Did the unit become unplugged? Is it switched on? Are the connections correct and complete? (It is easy for a cable to be half-plugged in, which can cause very puzzling behavior.) Is there a bad cable?

Even once basic mechanical causes have been explored, continue thinking of the simplest explanation. If the MP-2 is not responding to MIDI, check the channel settings after checking the cabling connections.

Audio Problems

Aside from the general suggestions given above, here are a few specific things to check for:

Symptom	Possible Cause
Unit does not power up	Not plugged in Not switched on Fuse is blown in unit Wall power is bad
No sound, no signal LEDs	Problem with instrument Bad cable or connection going to MP-2 Some level parameter is set to zero. Check: Master, Drive, OD, Loop A & B Mix Stereo Volume Controller is set to zero Gate Threshold is too high
No sound, LEDs OK	Problem with amplifier/monitor system Bad cable or connection going from MP-2 Output Level control set to zero Tuner Mute is engaged Some level parameter is set to zero. (see list above)

Unwanted distortion

Bad cable going to or from the MP-2
Problem in instrument or amplifier/monitor system
Effects Loop or XLR Level switches set incorrectly

Too much level within MP-2 (indicated by signal LEDs glowing red).

Hum

Bad cable
Problem in instrument or amplifier/monitor system
Ground loop (try Pin 1 Lift switch)

MIDI Problems

No response to controller

Incorrect or faulty MIDI cabling
MIDI channel not set to match controller
MIDI channel set to "Off"

No response to continuous controllers

Incorrect RTM assignment
Parameters under control not "captured"

Incorrect program changes

MIDI map improperly set up

Does not receive library or program

Incorrect or faulty MIDI cabling
MIDI channel not set to match source
MIDI channel set to "Off"

The **MIDI Monitor** function found in System Edit mode displays incoming controller and program change messages. This can be very helpful in trying to isolate MIDI problems. The **MIDI Mismatch Warning** function, also found in System Edit mode, when enabled, displays a warning when the MP-2 receives MIDI messages on a different channel than that to which it is currently set. This, too, can be useful in troubleshooting.

MP-2 Program Chart

Program Name and #:

Tube Voicing

Drive and Master Level


DRIVE	OVERDRIVE	MASTER
<input type="text"/>	<input type="text"/>	<input type="text"/>

Compressor

STATUS	IN	RATIO	THRESHOLD	GAIN
	OUT	:	<input type="text"/>	<input type="text"/>

Tone Controls

LO	MID	HI	PRESENCE
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

 

Graphic EQ

Wah Filter

STATUS	IN	PEDAL	MODE	TRIGGERED	AUTO
	OUT				

PEDAL TRIGGERED

WAH PEDAL	SENSITIVITY	DELAY	START POINT
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

AUTO

DEPTH	RATE	END POINT	WAVEFORM
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Tremolo

STATUS	IN	WAVEFORM	DEPTH	RATE
	OUT	<input type="text"/>	<input type="text"/>	<input type="text"/>

Noise Reduction

STATUS	IN	MODE	GATE	THRESHOLD
	OUT		FADER	

Stereo Chorus

STATUS	IN	DEPTH	RATE
	OUT	<input type="text"/>	<input type="text"/>

Stereo Effects Loop

STATUS	IN	MIX A	MIX B
	OUT	<input type="text"/>	<input type="text"/>

Real-Time MIDI

SLOT #	PARAMETER		SENSE	
	CTLR #	(F/R)	MIN	MAX
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				

NOTES